

# I-BUTTON\_S



Rev.2

[IT] CODICI; [EN] CODES; [FR] CODES; [ES] CÓDIGOS; [DE] ARTIKELNUMMER [CZ] KÓDY

[IT] NORMALE  
[EN] NORMAL  
[FR] NORMALE  
[ES] NORMAL  
[DE] NORMAL  
[CZ] NORMAL

[IT] BISTABILE  
[EN] BISTABLE  
[FR] BISTABLE  
[ES] BIESTABLE  
[DE] BISTABIL  
[CZ] BISTABIL


[IT] UOMO-PRESENTE  
[EN] DEAD MAN  
[FR] HOMME MORT  
[ES] HOMBRE-PRESENTE  
[DE] TOTMANN  
[CZ] NUCENÉ ŘÍZENÍ

I-BUTTON_S#MON	I-BUTTON_S_BIST	I-BUTTON_S_PRE

[IT] CONTATTO PULITO  
[EN] DRY CONTACT  
[FR] CONTACT SEC  
[ES] CONTACTO LIMPIO  
[DE] POTENTIALFREIER KONTAKT  
[CZ] ČISTÝ KONTAKT

## PINOUT

30VDC, 0.2 A

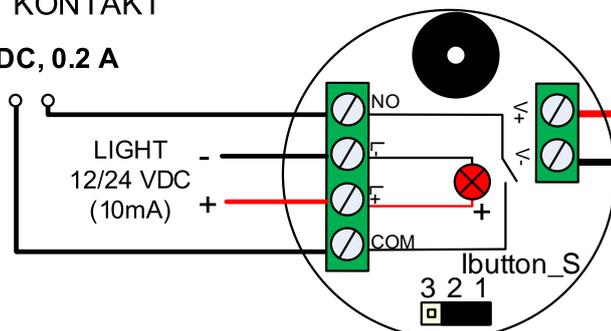


[IT] ALIMENTAZIONE  
[EN] POWER SUPPLY  
[FR] ALIMENTATION  
[ES] ALIMENTACION  
[DE] STROMVERSORGUNG  
[CZ] NAPÁJENÍ

+ 12/24 VDC ±10%  
- Stand-by= 10 mA  
Max=30mA



IP:51

Range Temperature: -20°/+60


[IT] PROGRAMMAZIONE CHIAVE MASTER (CHIAVE ROSSA); [EN] MASTER KEY PROGRAMMING (RED KEY); [FR] PROGRAMMATION CLE MASTER (CLE ROUGE); [ES] PROGRAMACIÓN LLAVE MAESTRA (LLAVE ROJA); [DE] PROGRAMMIERUNG MASTER KEY (ROT); [CZ] PROGRAMOVÁNÍ MASTER KLÍČE (ČERVENÝ KLÍČ).

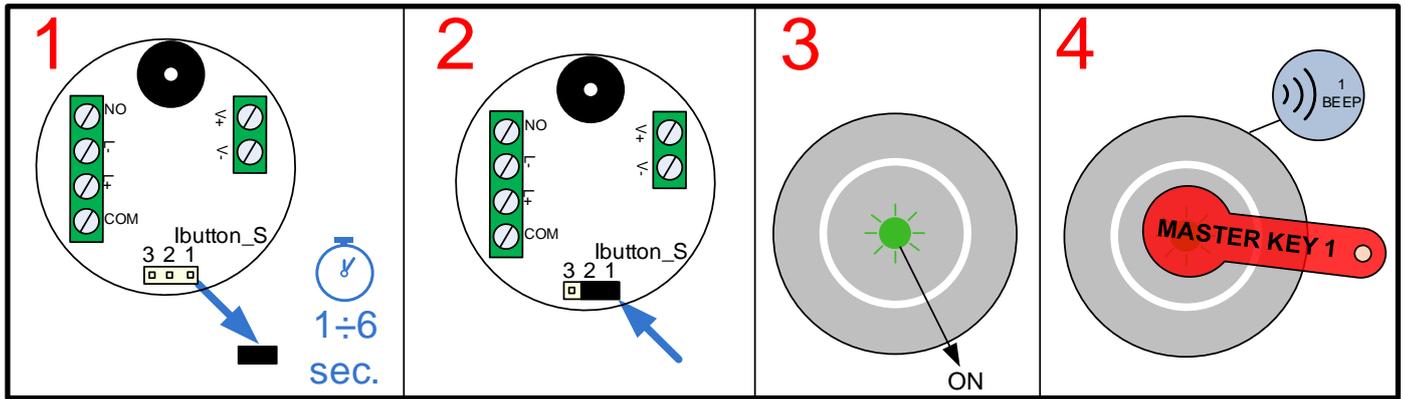

[IT] PROGRAMMAZIONE CHIAVI SLAVE (CHIAVE NERA); [EN] SLAVE KEYS PROGRAMMING (BLACK KEY); [FR] PROGRAMMATION SLAVE KEY (CLE NOIRE); [ES] LLAVE NEGRA USUARIO; [DE] PROGRAMMIERUNG SLAVE KEY (SCHWARZ); [CZ] PROGRAMOVÁNÍ SLAVE UŽIVATELSKÉHO KLÍČE (ČERNÝ KLÍČ).

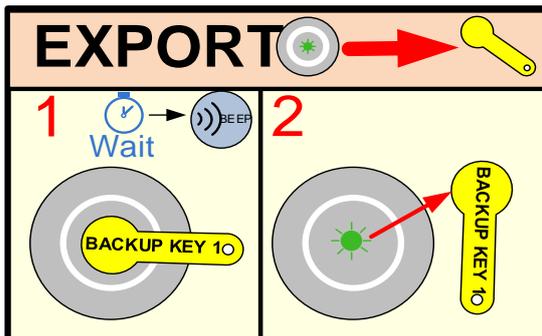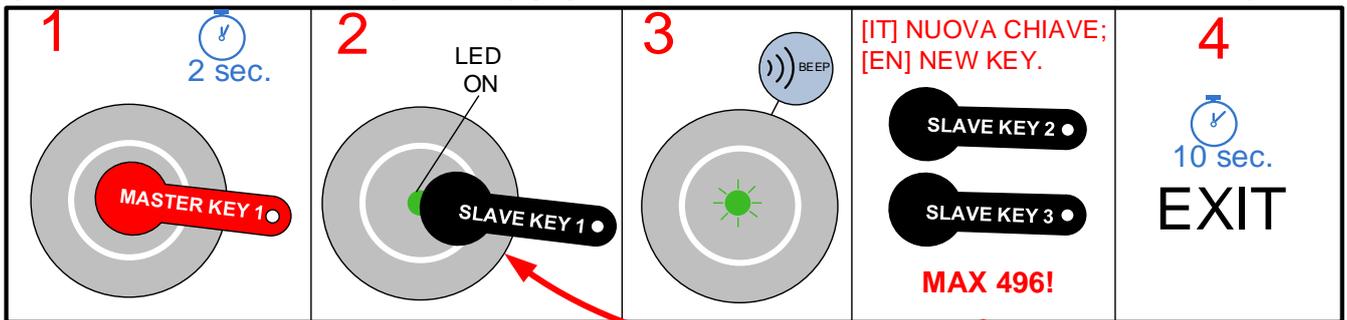

[IT] EXPORT/IMPORT MEMORIA (CHIAVE GIALLA); [EN] MEMORY EXPORT-IMPORT (YELLOW KEY); [FR] IMPORTER ET EXPORTER LES DONNEES (CLE JAUNE); [ES] EXPORTACION – IMPORTACION DE MEMORIA; [DE] BACKUP FUNKTION (GELBER SCHLUESSEL); [CZ] EXPORT/IMPORT PAMĚTI (ŽLUTÝ KLÍČ).

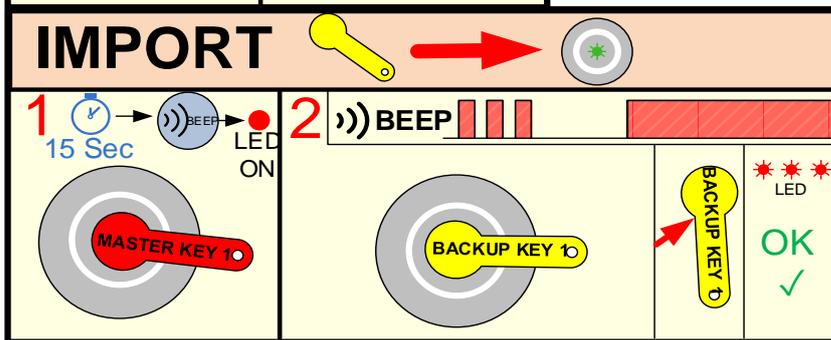

[IT] RESET IBUTTON (CANCELLAZIONE MEMORIA); [EN] RESET IBUTTON (DELETE MEMORY); [FR] REINITIALISATION DE LA MEMOIRE; [ES] REINICIO (BORRAR LA MEMORIA); [DE] LÖSCHEN DES SPEICHERS; [CZ] RESET IBUTTONU (VYMAZÁNÍ PAMĚTI).

