

***INTERCOM***  
*Internal phone*



Technical Handbook

---

*emergency system for elevators*  
*[www.vegalift.it](http://www.vegalift.it)*



## Description

Intercom is an internal phone system wich connect car, roof, pit and engine room together.

Intercom is provided by an extended range power supply input (12 – 15 Vdc).

## Installation

### Intercom and handset description

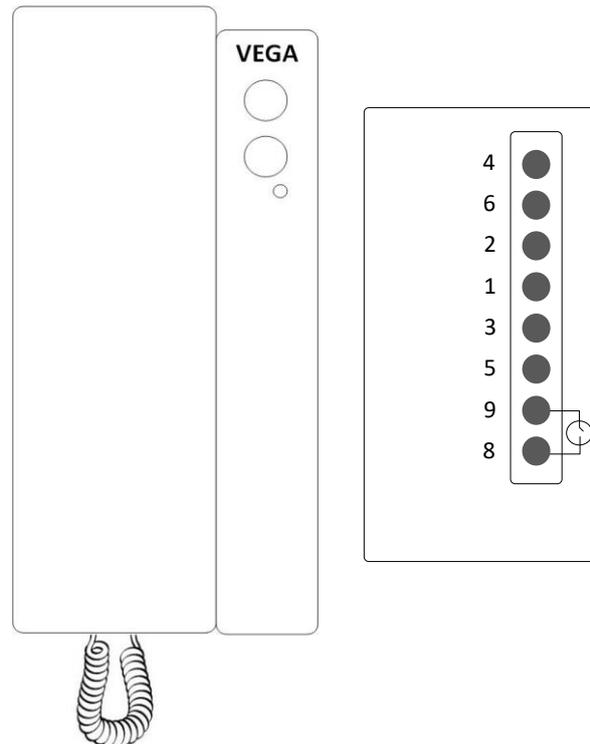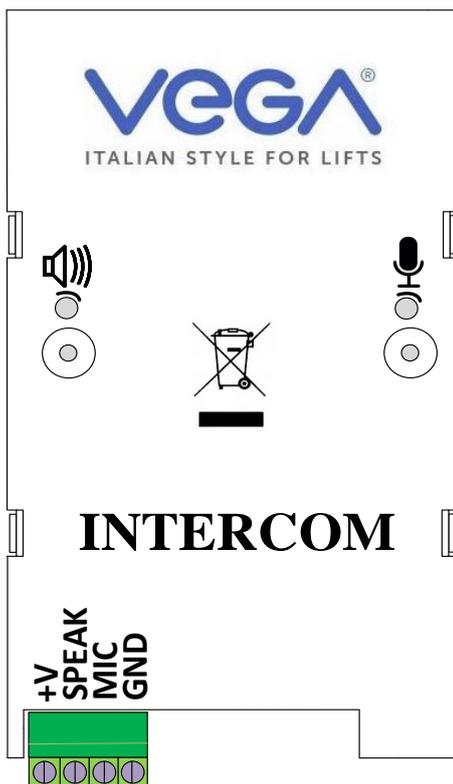


#### Speaker terminals:

- **+V:** Power Supply + 12 / 15 VDC
- **SPEAK:** Speaker
- **MIC:** Microphone
- **GND:** Common (-)


#### Phone terminals:

- **1:** Microphone
- **2:** Speaker
- **3:** Common (-)
- **8:** NO contact
- **9:** COM contact

**Quote**

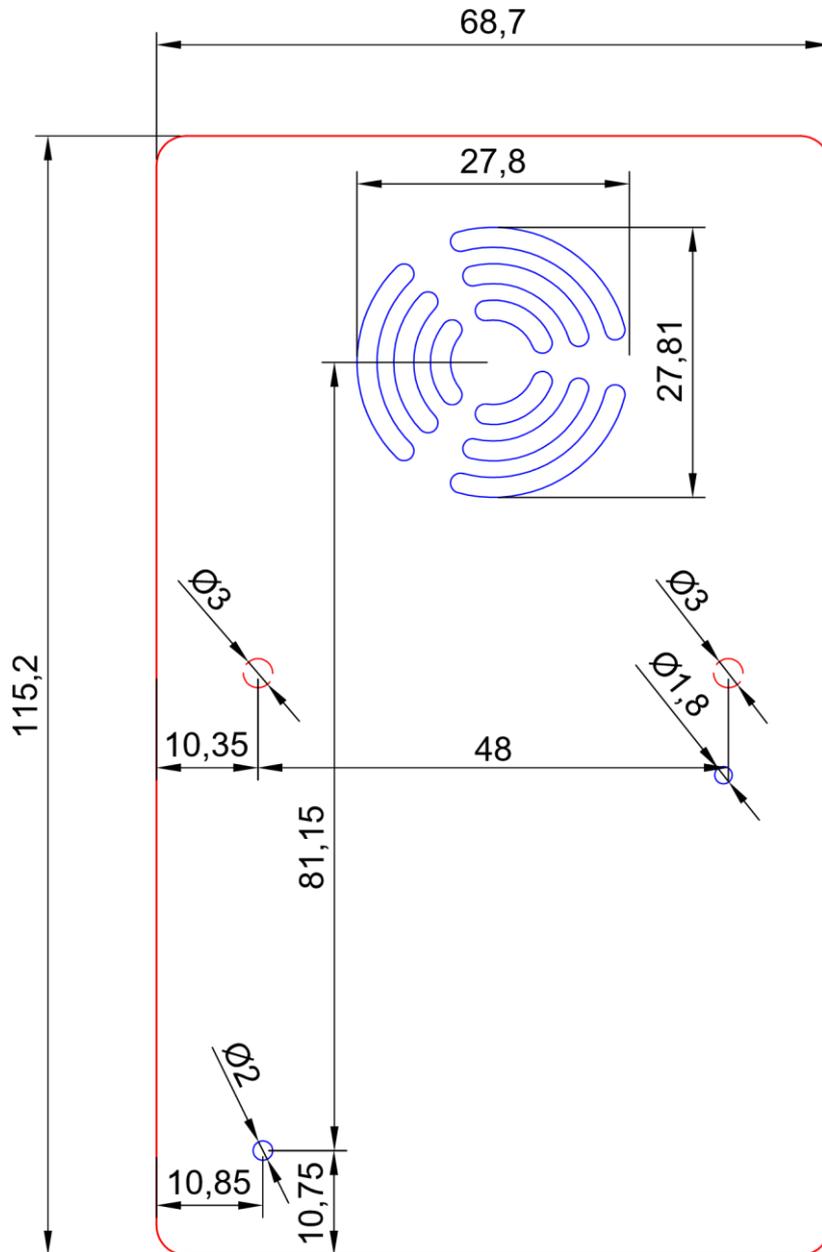


## Two-points installation and connection

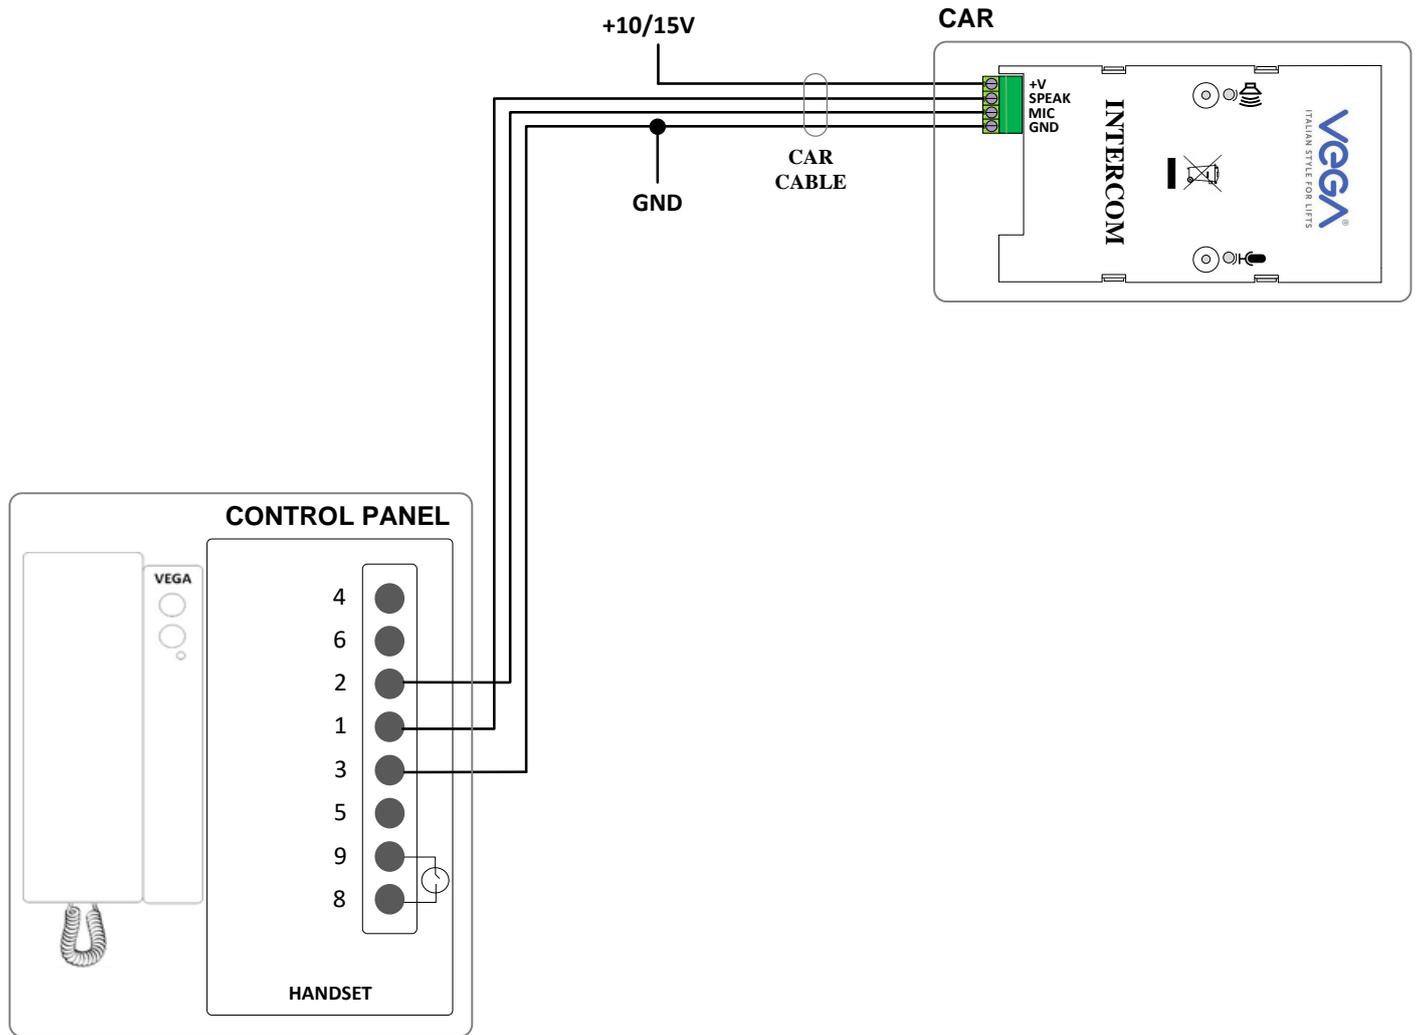

 We recommend using the SHIELDED CABLE for two-points installation and connection 

# Four-points installation and connection

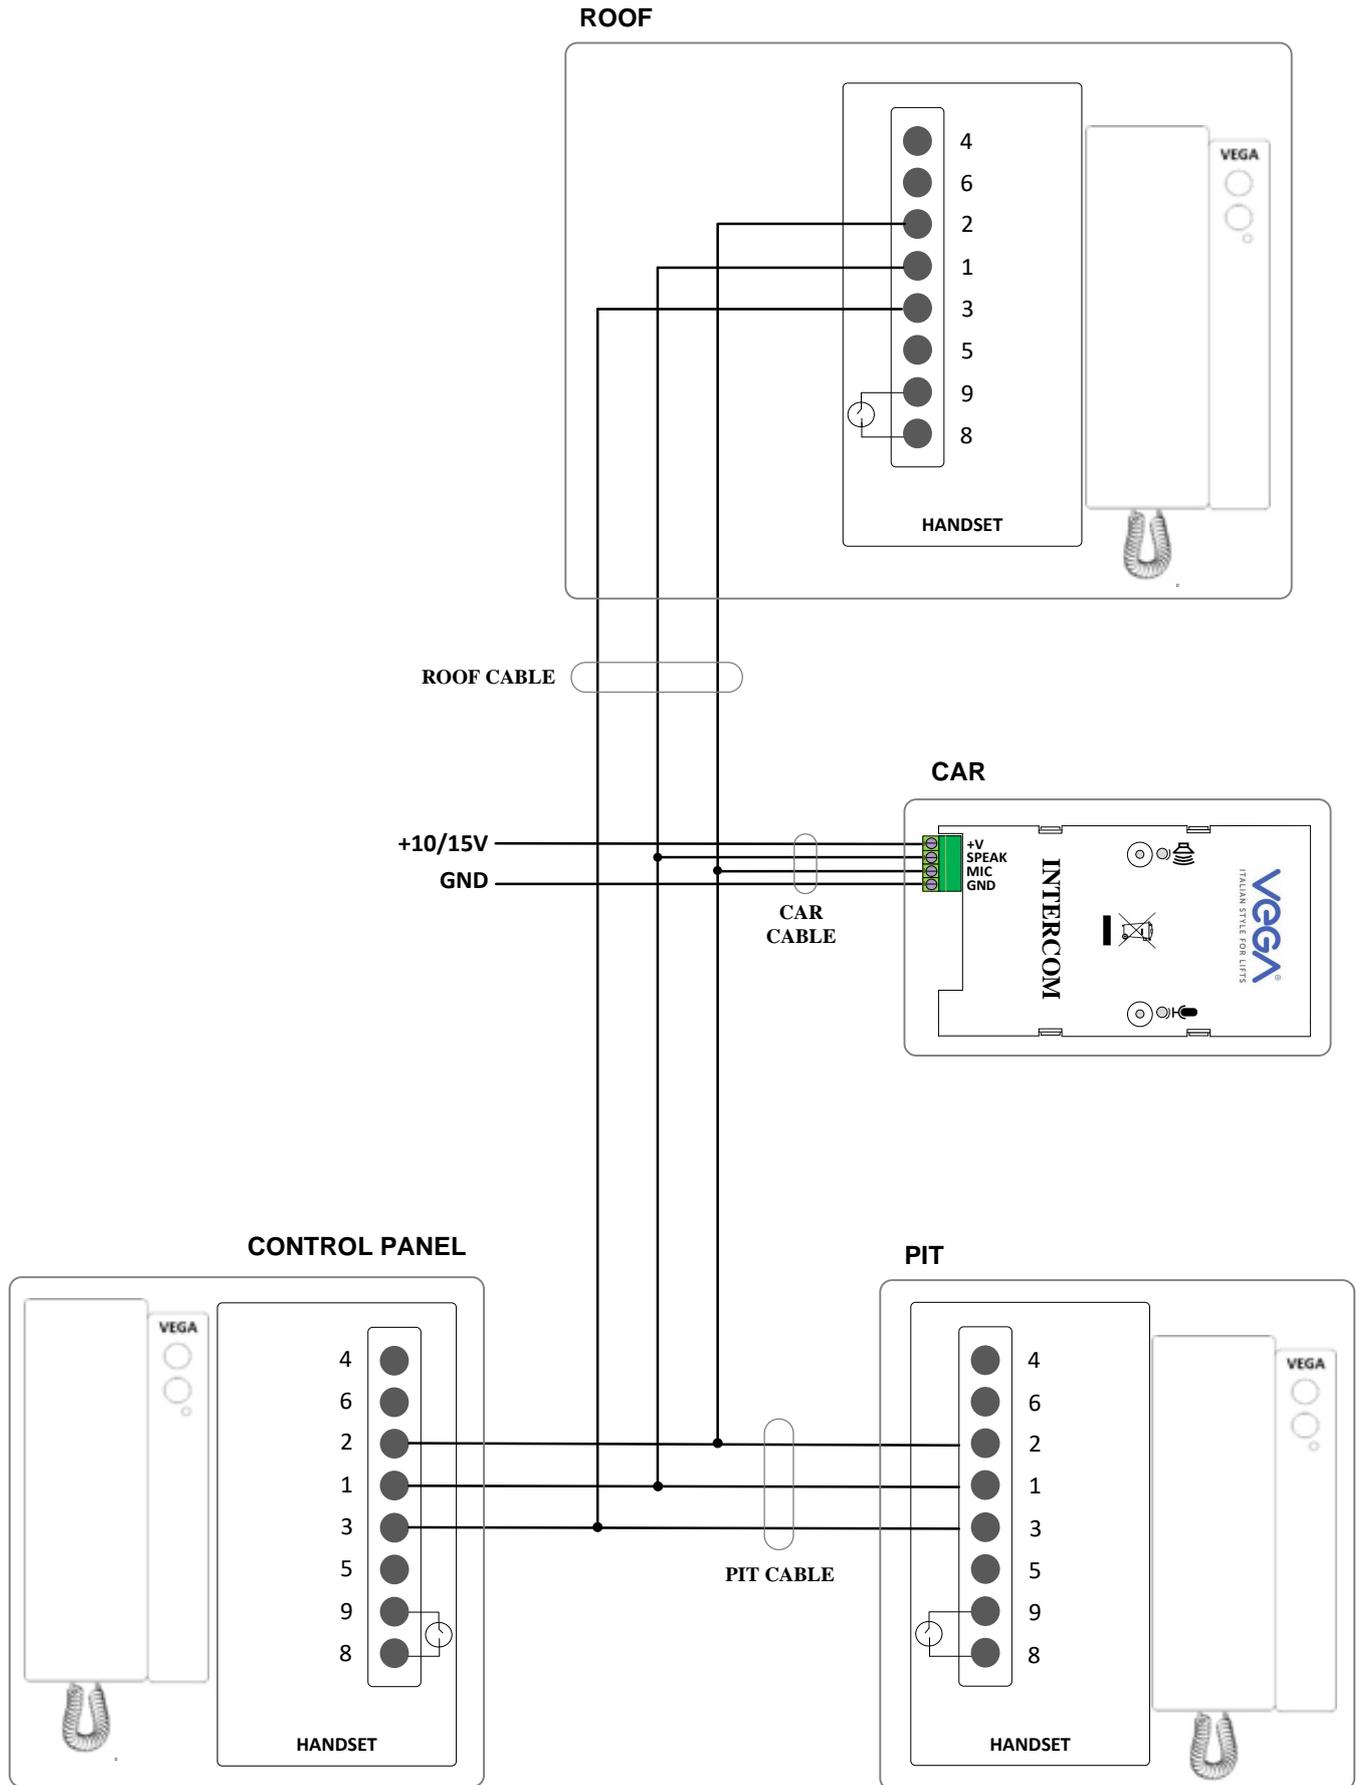

 We recommend using the SHIELDED CABLE for four-points installation and connection 

**VEGA**<sup>®</sup>

**ITALIAN STYLE FOR LIFTS**

Via degli Appennini 11  
63020 Ponzano di Fermo (FM)  
Tel. 0734.631941 - Fax 0734.636098  
website: [www.vegalift.it](http://www.vegalift.it)