


**ENGLISH**

## DISPLAY LCD 68X-PAR

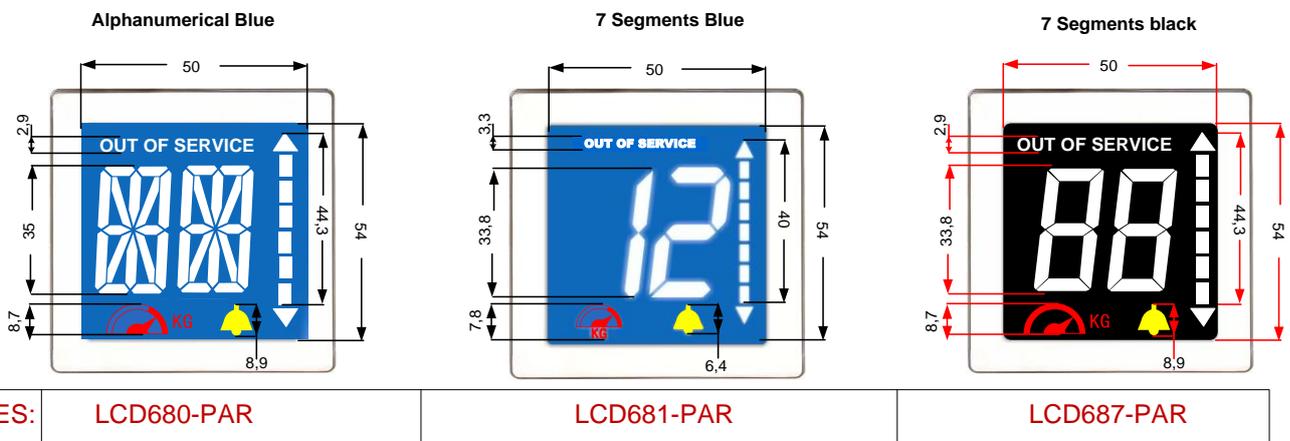


 For Bugatti plates

**KIT OF FIXED:**  
Kit.V.ICARO.BUG. fixing kit for Bugatti plate



**CODICI KIT DI FISSAGGIO**


- KIT cornice VG001: Cornice cromata ribassata
- KIT cornice VG002: Cornice cromata normale
- KIT cornice VG005: Cornice dorata normale

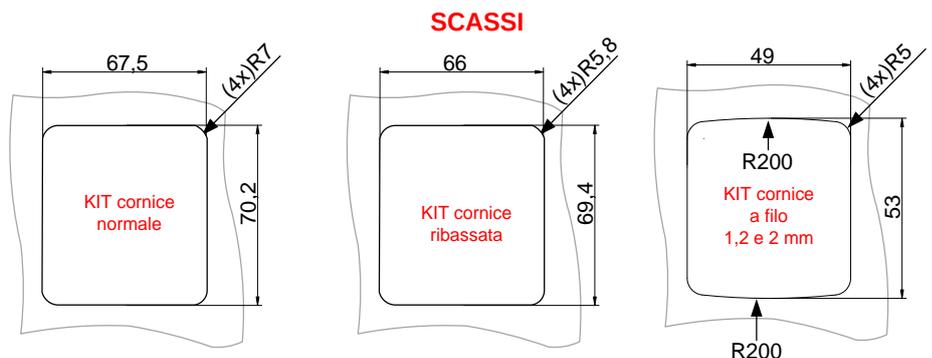

## TECHNICAL DATA

VISIBLE AREA	57x54 mm
DIMENSION	82x62x14 mm
PROGRAMMING	Act the ENT and SEL push buttons on the board
ALIMENTAZIONE	12-24 VAC/DC $\pm$ 10%
MAXIMUM POWER	1,2W
TEMPERATURE WORKING RANGE	From -15°C to +50°C
TEMPERATURE STOCKING RANGE	From -25°C to +60°C


## LAYOUT

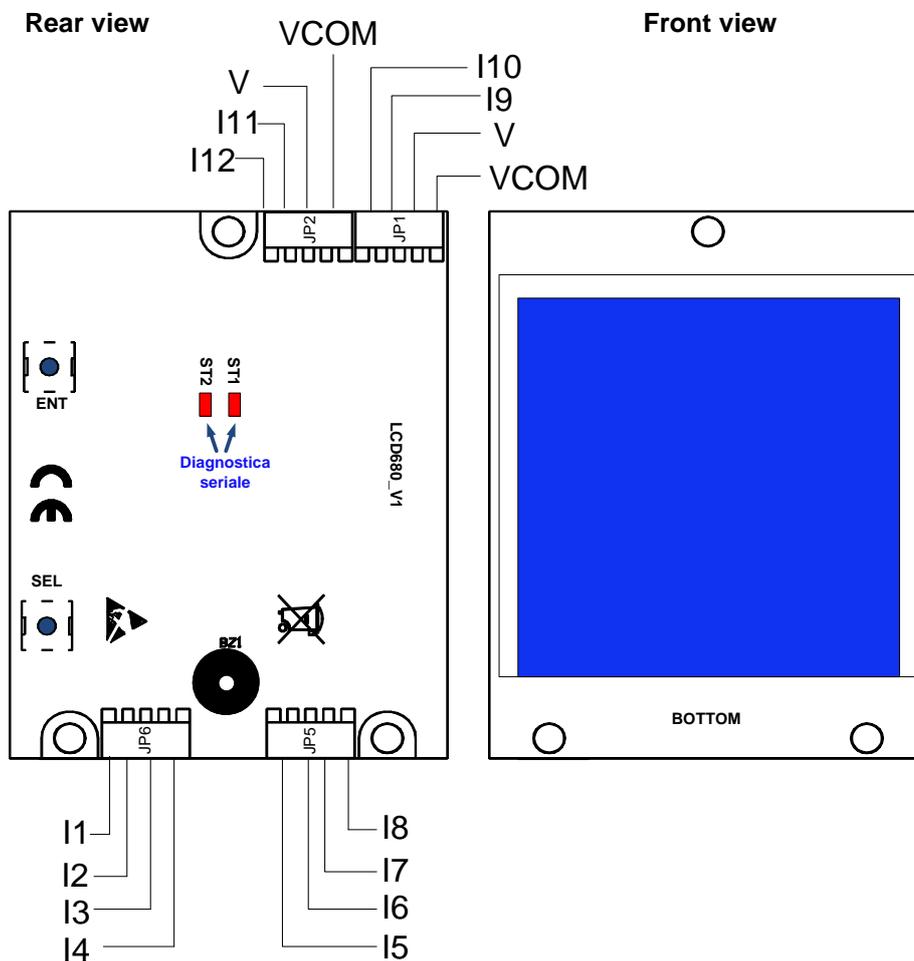


## PINOUT

PIN	I1	I2	I3	I4	I5	I6	I7	I8	I9	I10	I11	I12	V	VCOM
Descr	In.1 A	In.2 B	In.3 C	In.4 D	In.5 E	In.6	In.7/ Al.	UP arrow	DOWN arrow	In10 /Gon g	In.11 /FS	In.12/ OVL	Power supply	
Defau lt	-1	0	1	2	3	4	5	Sal	Disc.	6	7	8	Power supply	

## CONNECTION DRAWING

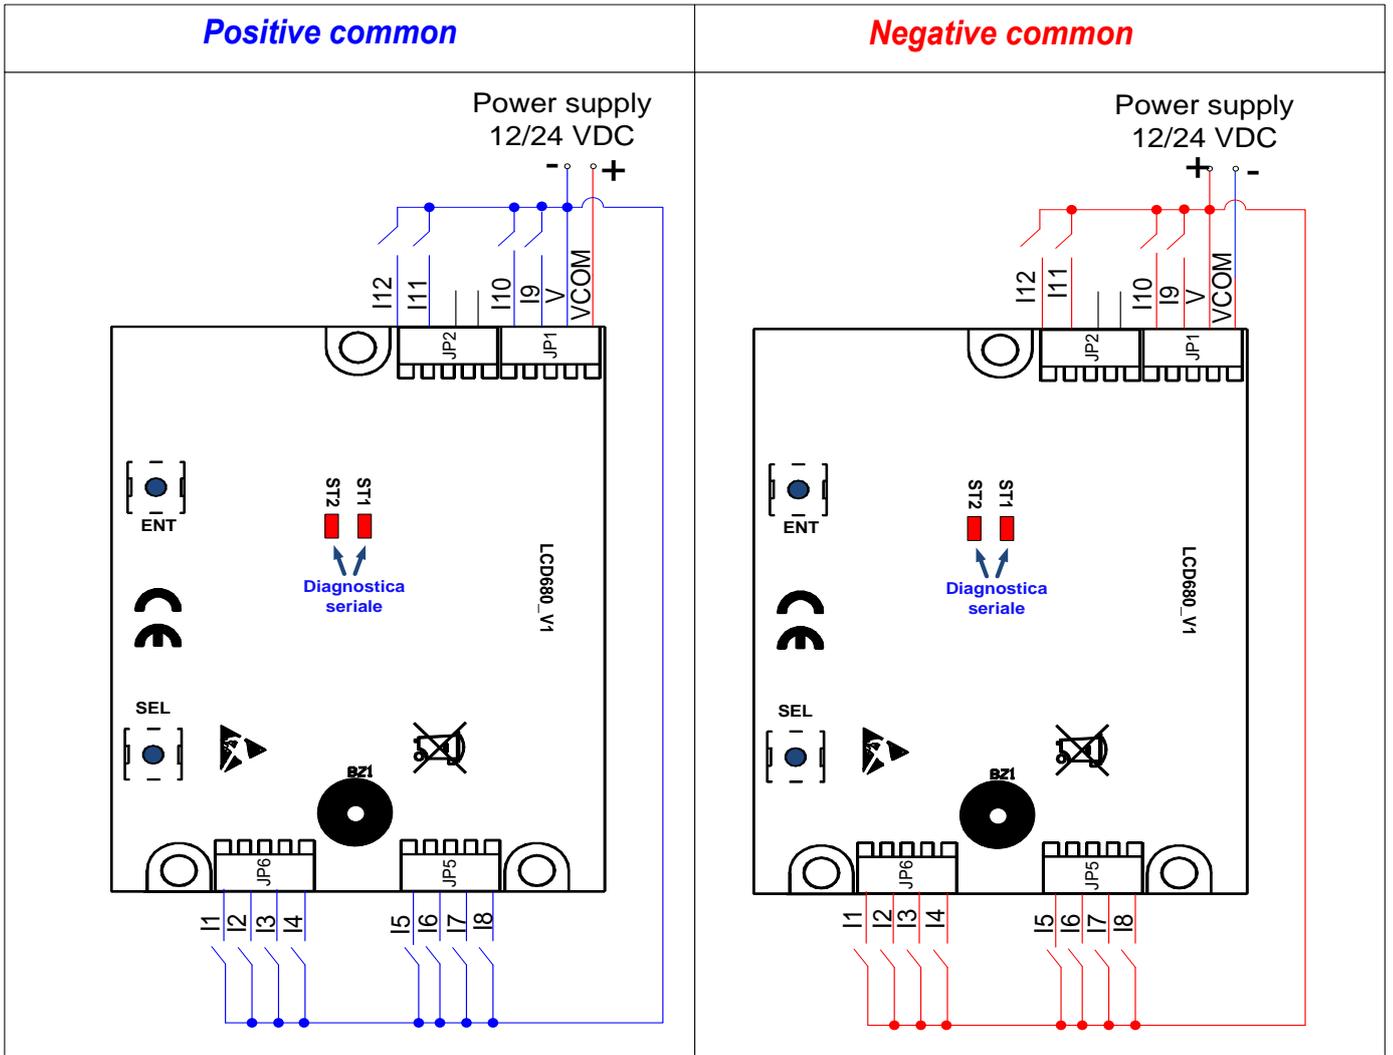


### MOUNTING:

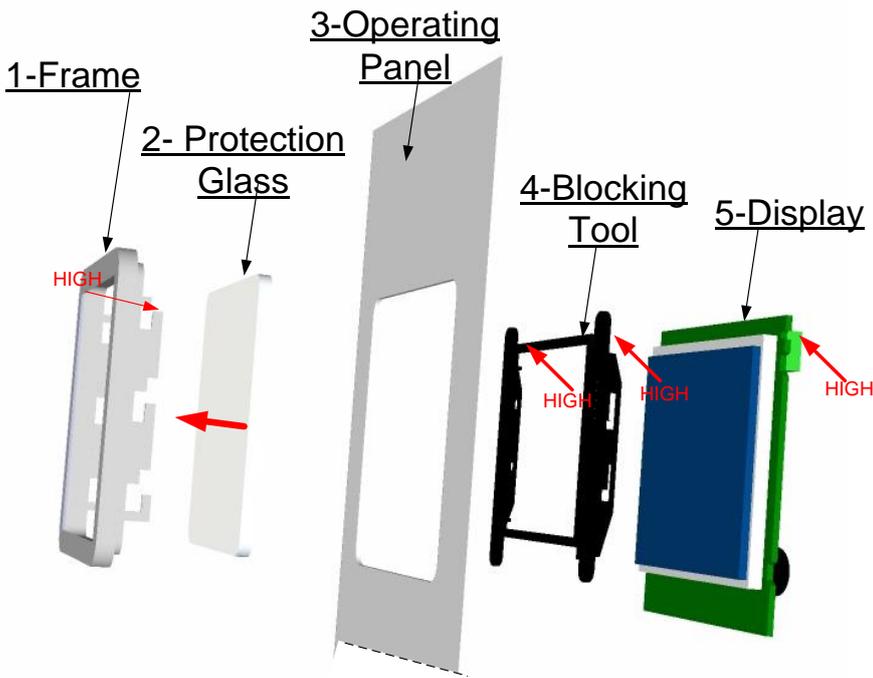

- A-** Place protection glass (2) within the frame (1);
- B-** Hook the blocking tool (4) to the display (5)
- C-** Insert into the groove of the operating panel (3)
- D-** Insert the blocking tool (4-5) into the slots of the frame and put pressure down to lock it down.
- E-** Insert the 4 screws into the slots of the blocking tool (4).

## Programming mode

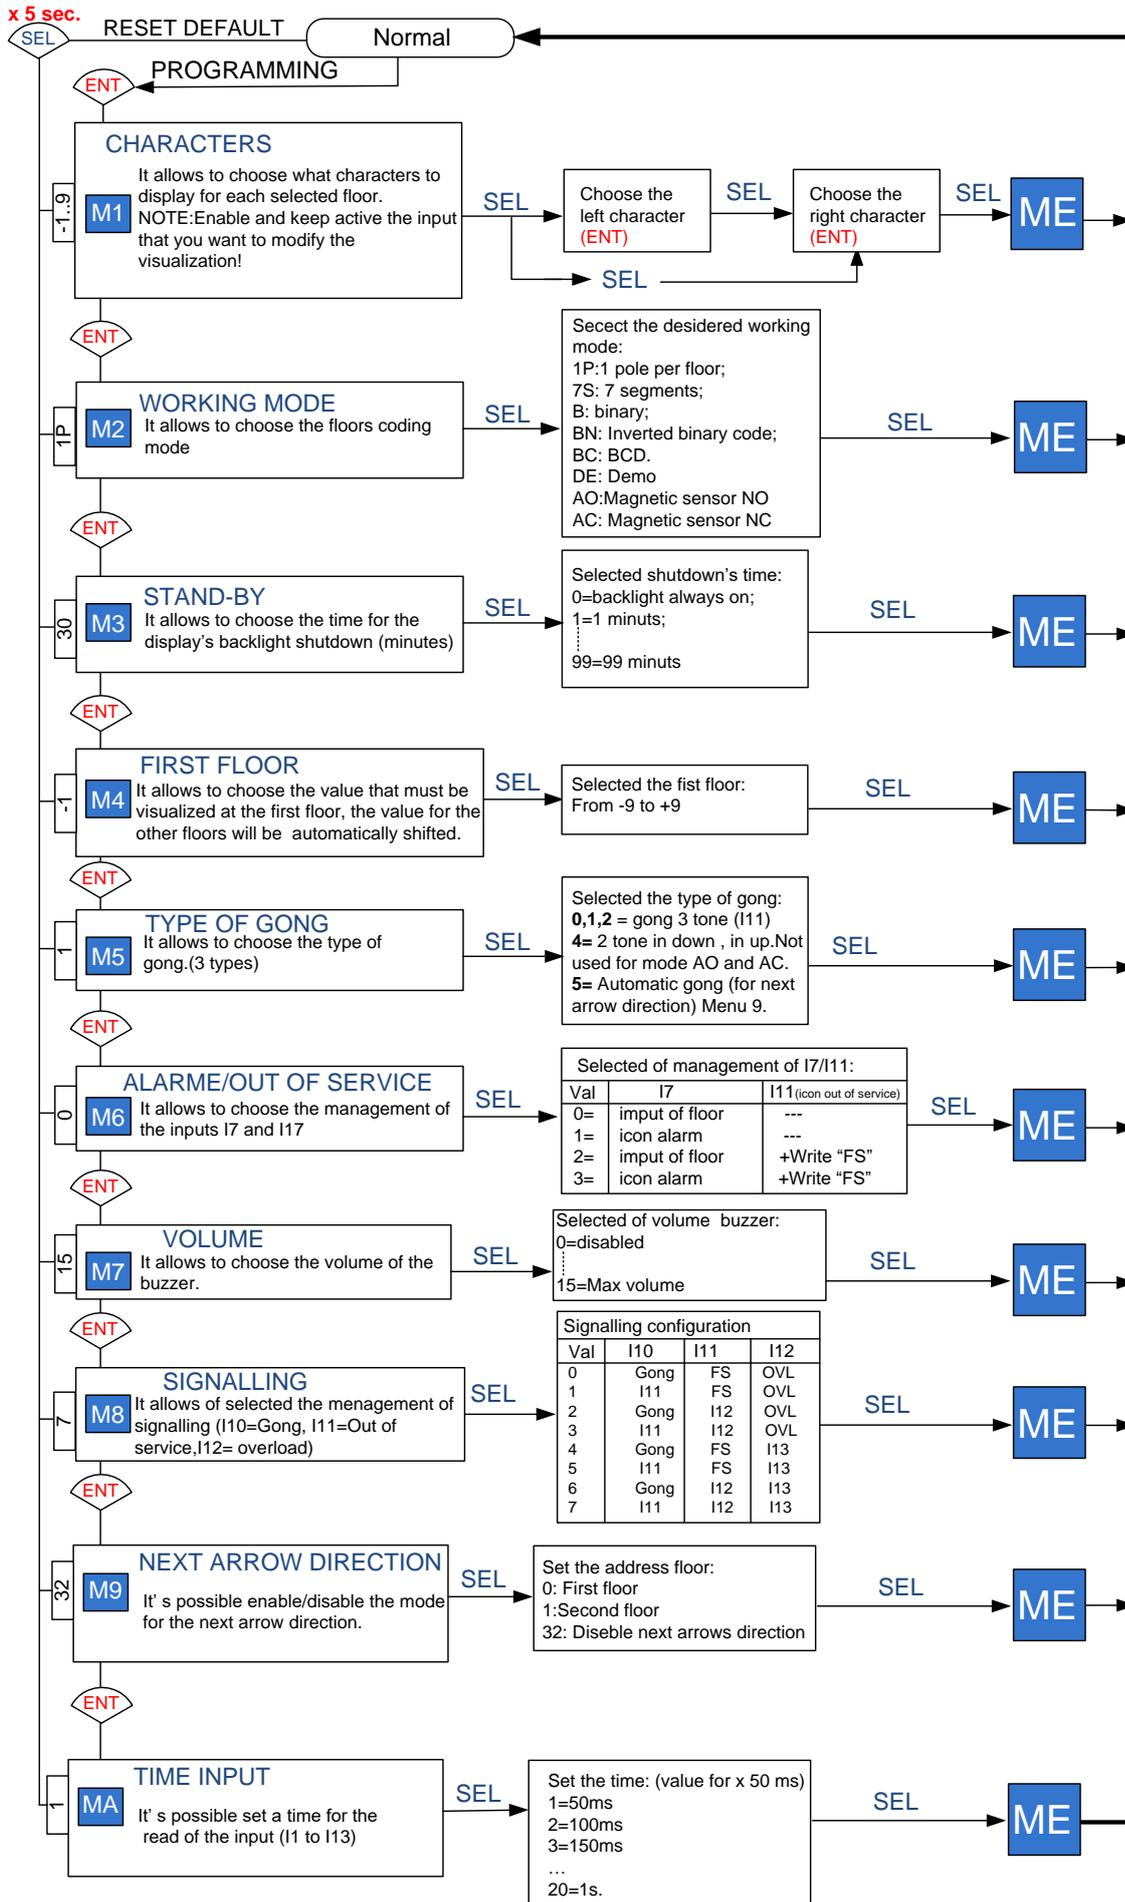

Code	Display	Description
1 wire per floor	<b>1P</b>	Each input matches a floor.(Range from -1 to 9)
7 Segments	<b>7S</b>	Each input (I1-I7) matches a segment of a digit. The input I11 is used to visualize the sign "-", while the input 12 activates the ten.
Binary	<b>B</b>	Use only the first 5 inputs to calculate the floor number in binary code. (Range from 0 to 31). Input "6" is used to calculate the sign "-"
Inverted binary	<b>BN</b>	Use only the first 5 inputs to calculate the floor number in binary code. (Range from 0 to 31). Input "6" is used to calculate the sign "-"
BCD	<b>BC</b>	The first 4 inputs are the unit in binary code, the input "5" is the the ten and the input "6" is the sign "-". If both I5 and I6 are activated, I6 has priority
Gray	<b>GR</b>	Use the first 5 input to calculate the floor in gray code (from 0 to 31)
Demo	<b>DE</b>	Enable or diseble the simulation mode (DEMO)
Autonomo NO	<b>AO</b>	Magnetic sensor (normally open)
Autonomo NC	<b>AC</b>	Magnetic sensor (normally close)

### BINARY /INVERTED BINARY

Binary	Inverted binary	1	2	3	4	5
0	31	OFF	OFF	OFF	OFF	OFF
1	30	ON	OFF	OFF	OFF	OFF
2	29	OFF	ON	OFF	OFF	OFF
3	28	ON	ON	OFF	OFF	OFF
4	27	OFF	OFF	ON	OFF	OFF
5	26	ON	OFF	ON	OFF	OFF
6	25	OFF	ON	ON	OFF	OFF
7	24	ON	ON	ON	OFF	OFF
8	23	OFF	OFF	OFF	ON	OFF
9	22	ON	OFF	OFF	ON	OFF
10	21	OFF	ON	OFF	ON	OFF
11	20	ON	ON	OFF	ON	OFF
12	19	OFF	OFF	ON	ON	OFF
13	18	ON	OFF	ON	ON	OFF
14	17	OFF	ON	ON	ON	OFF
15	16	ON	ON	ON	ON	OFF
16	15	OFF	OFF	OFF	OFF	ON
17	14	ON	OFF	OFF	OFF	ON
18	13	OFF	ON	OFF	OFF	ON
19	12	ON	ON	OFF	OFF	ON
20	11	OFF	OFF	ON	OFF	ON
21	10	ON	OFF	ON	OFF	ON
22	9	OFF	ON	ON	OFF	ON
23	8	ON	ON	ON	OFF	ON
24	7	OFF	OFF	OFF	ON	ON
25	6	ON	OFF	OFF	ON	ON
26	5	OFF	ON	OFF	ON	ON
27	4	ON	ON	OFF	ON	ON
28	3	OFF	OFF	ON	ON	ON
29	2	ON	OFF	ON	ON	ON
30	1	OFF	ON	ON	ON	ON
31	0	ON	ON	ON	ON	ON

### GRAY 5 bits

Floor (GRAY)	1	2	3	4	5
0	OFF	OFF	OFF	OFF	OFF
1	ON	OFF	OFF	OFF	OFF
2	ON	ON	OFF	OFF	OFF
3	OFF	ON	OFF	OFF	OFF
4	OFF	ON	ON	OFF	OFF
5	ON	ON	ON	OFF	OFF
6	ON	OFF	ON	OFF	OFF
7	OFF	OFF	ON	OFF	OFF
8	OFF	OFF	ON	ON	OFF
9	ON	OFF	ON	ON	OFF
10	ON	ON	ON	ON	OFF
11	OFF	ON	ON	ON	OFF
12	OFF	ON	OFF	ON	OFF
13	ON	ON	OFF	ON	OFF
14	ON	OFF	OFF	ON	OFF
15	OFF	OFF	OFF	ON	OFF
16	OFF	OFF	OFF	ON	ON
17	ON	OFF	OFF	ON	ON
18	ON	ON	OFF	ON	ON
19	OFF	ON	OFF	ON	ON
20	OFF	ON	ON	ON	ON
21	ON	ON	ON	ON	ON
22	ON	OFF	ON	ON	ON
23	OFF	OFF	ON	ON	ON
24	OFF	OFF	ON	OFF	ON
25	ON	OFF	ON	OFF	ON
26	ON	ON	ON	OFF	ON
27	OFF	ON	ON	OFF	ON
28	OFF	ON	OFF	OFF	ON
29	ON	ON	OFF	OFF	ON
30	ON	OFF	OFF	OFF	ON
31	OFF	OFF	OFF	OFF	ON


*OFF: input disabled*  
*ON: input enabled*




### 7 SEGMENTS code

Each input (I1-I7) matches a segment of a digit. The input I10 is used to visualize the sign "-" (segment g2), while the input 11 activates the ten (b2,c2 segment ). The coding segments 7 can manage up to 29 stops (- 9 to 19). Using the menu 8 you can change its input I10 (like gong) and I11 (as out of service).

SEGMENT 1									SEGMENT 2		
I1	I2	I3	I4	I5	I6	I7	I8	I9	I10	I11	I12
a1	b1	c1	d1	e1	f1	g1/ ALARM	▲	▼	g2/ GONG	b2+c2	OVL

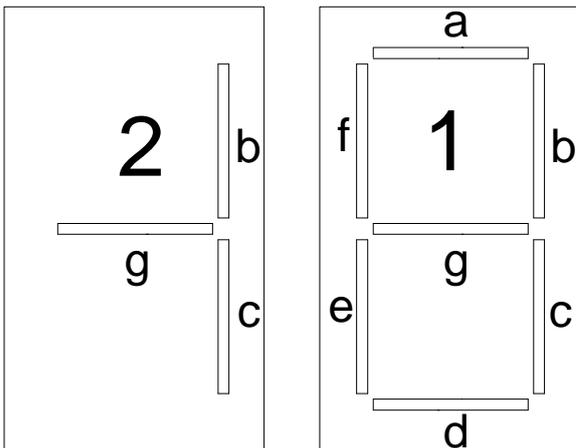

### DIMENSION DISPLAY

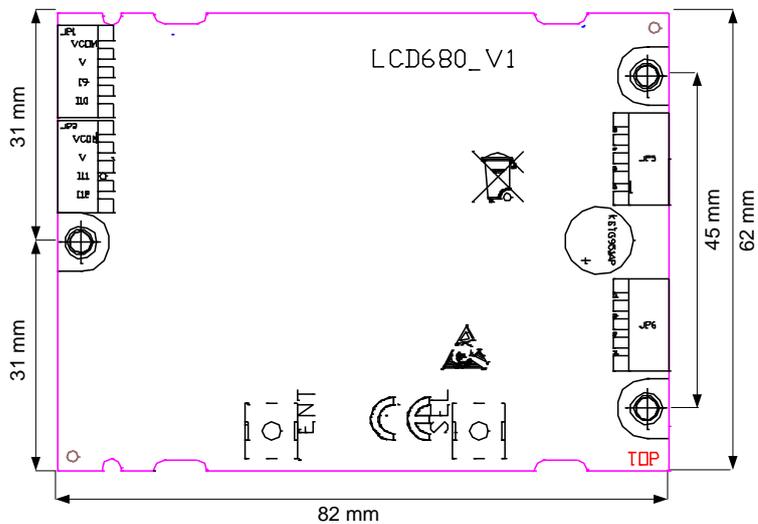

## **CONDIZIONI DI GARANZIA E POLITICA DI GESTIONE DEI RECLAMI**

VEGA Srl, nell'ottica del miglior servizio al Cliente, La invita a leggere le seguenti note: riteniamo essenziale la Sua fiducia per il mantenimento di un continuativo rapporto d'affari.

VEGA Srl, garantisce le prestazioni di prodotti con proprio marchio esclusivamente in relazione ad usi, destinazioni e applicazioni espressamente indicati. Ogni altro uso è da considerarsi improprio e quindi pericoloso.

E' prevista la riparazione e/o sostituzione, a scelta di VEGA, dei prodotti che entro 12 mesi dalla data di vendita venissero riscontrati malfunzionanti a causa di difetti dovuti a progettazione, di materiale o di fabbricazione; sono esclusi i malfunzionamenti derivanti da manomissioni o da errati installazione, utilizzo, conservazione, modifiche o riparazioni effettuate senza il previo consenso scritto di VEGA.

Sono esclusi da garanzia l'utilizzo del prodotto in condizioni non conformi alla presente scheda tecnica, in condizioni di irregolarità della tensione di alimentazione, impiego diverso da quello previsto o qualsiasi altra causa non imputabile a VEGA.

La verifica dei malfunzionamenti compete a VEGA e ai suoi tecnici. Salvo il caso di dolo, VEGA non risponde dei danni diretti, indiretti e/o consequenziali derivanti dal compratore del prodotto fornito.

Eventuali danni fisici sul prodotto devono essere contestati entro e non oltre 3 giorni lavorativi dall'arrivo della merce.

La garanzia del presente prodotto è sostitutiva delle garanzie legali per vizi e conformità ed esclude ogni altra possibile responsabilità di VEGA comunque originata dalla merce fornita (inclusa la richiesta di risarcimento danni).

In caso di difetti o per qualunque reclamo, La preghiamo di informarci tempestivamente utilizzando il mezzo a Lei più congeniale e descrivendo, nel modo più completo possibile affinché il Suo problema possa essere risolto prontamente e con Sua piena soddisfazione.

Nel confidare che anche al minimo reclamo ci voglia contattare, VEGA Srl Le segnala l'indirizzo a cui poter far riferimento:

**VEGA S.r.l.**

**Mail to:** [assistenza@vegalift.it](mailto:assistenza@vegalift.it)

**Web:** [www.vegalift.it](http://www.vegalift.it)



*Via degli Appennini 11-13, Contrada Capparuccia 63845 Ponzano di Fermo (FM)*  
P.Iva 01578140442 – Telefono: +39 (0)734 631941 - Fax: +39 (0)734 636098  
website [www.vegalift.it](http://www.vegalift.it) - e-mail [info@vegalift.it](mailto:info@vegalift.it)