


# VEGA®

ITALIAN STYLE FOR LIFTS

## LOP AIDA SLIM

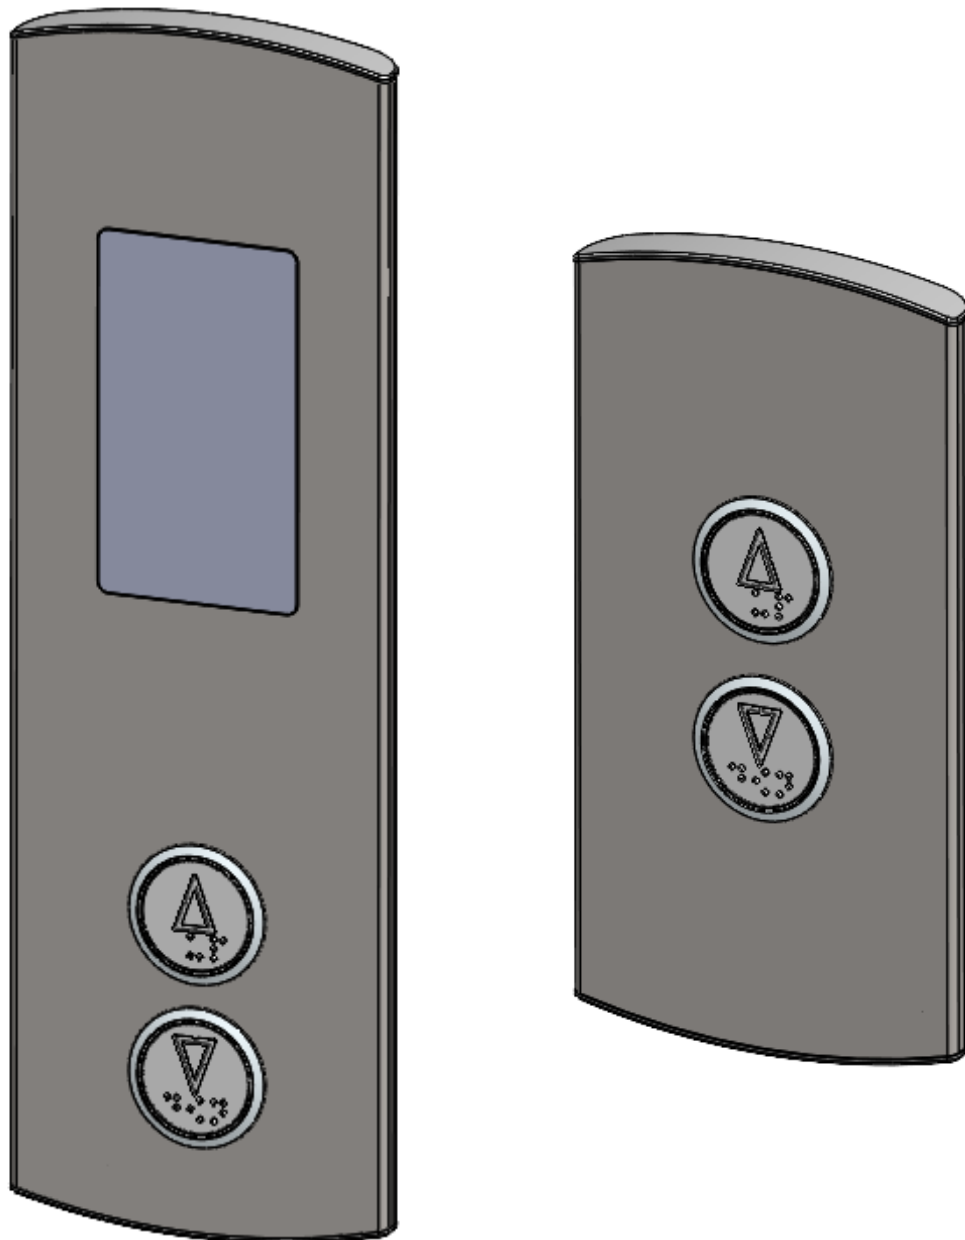

### **Istruzioni di Montaggio** **Assembly Instructions**

Rev.01 - 18/09/2025

## **Contenuto della confezione/Package contents:**

[A] Telaio LOP Aida Slim /Back plate;


[B] LOP Aida Slim /Front plate;

[C] Kit viti fissaggio a muro/Wall fixing screw kit:


- 3x Vite autofilettante/Self-tapping screw  $\varnothing 3.9 \times 16 \text{ mm}$
- 3x Vite autofilettante/Self-tapping screw  $\varnothing 3.9 \times 32 \text{ mm}$
- 3x Tassello in nylon /Nylon wall plug  $\varnothing 6 \times 30 \text{ mm}$
- 2x Nottolino di fissaggio/Fixing pin



[A]

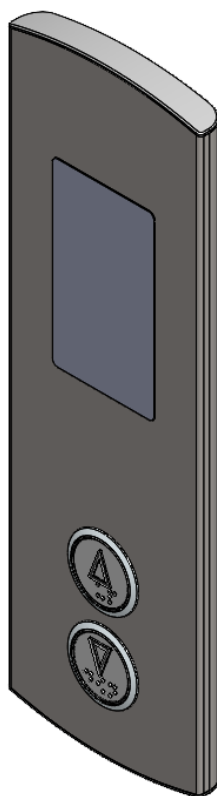


[B]

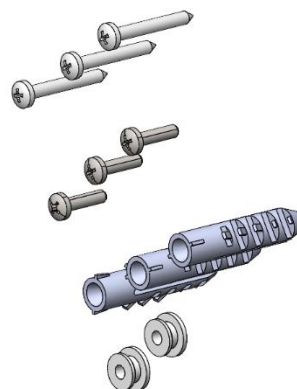

[C]

## STEP 1

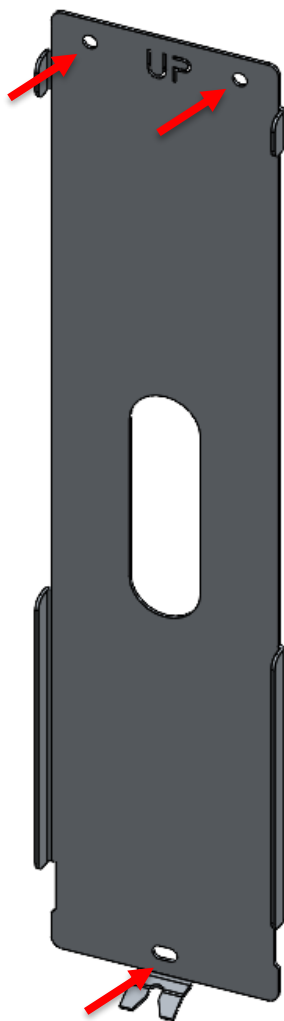


1. Posizionare il telaio [A] alla parete assicurandosi che la scritta “UP” sia rivolta verso l’alto.

*1. Place the back plate [A] on the wall making sure that the word “UP” is facing upwards.*

2. Segnare i fori sulle fessure, rimuovere il telaio dal muro e forare.

*2. Mark the holes on the slots, remove the frame from the wall and drill.*

## STEP 1

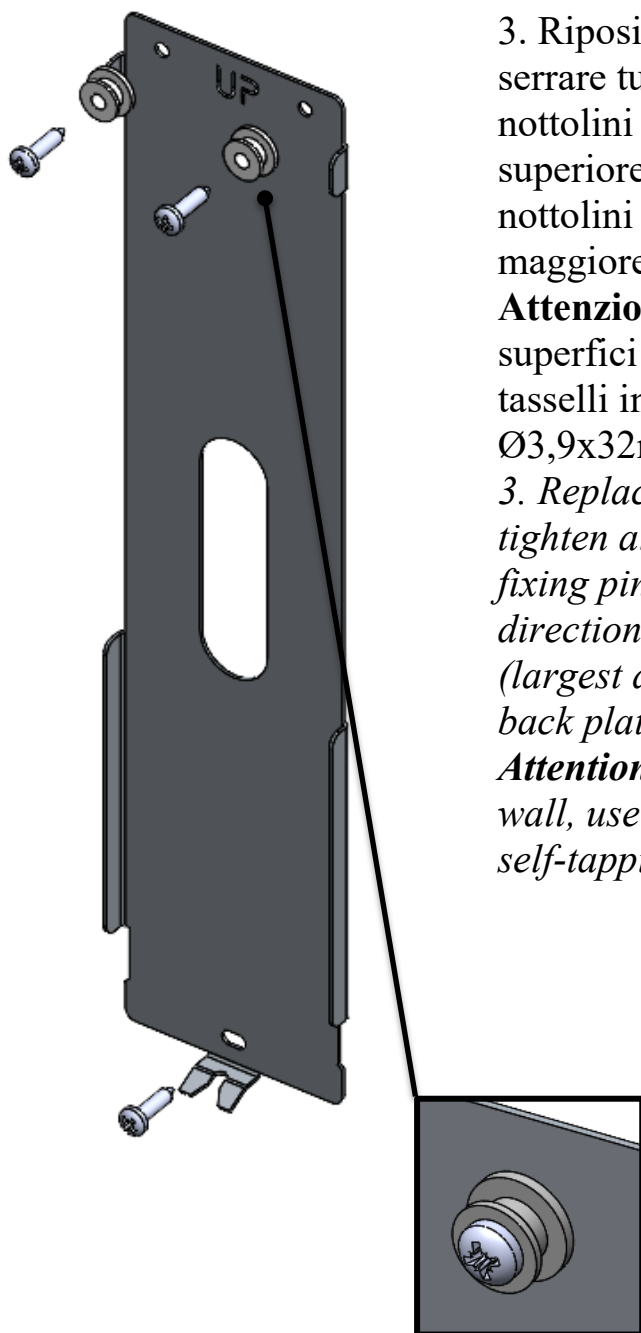


3. Riposizionare il telaio a parete e serrare tutte le viti [C] insieme ai due nottolini di fissaggio nella parte superiore. Rispettare il verso dei nottolini come indicato (diametro maggiore a contatto con il telaio).

**Attenzione:** in caso di montaggio su superfici in muratura, utilizzare i tasselli in nylon e le viti autofilettanti Ø3,9x32mm.

*3. Replace the back plate to wall and tighten all the screws [C] with the two fixing pins at the top. Respect the direction of the pins as indicated (largest diameter in contact with the back plate).*

**Attention:** if mounting on a masonry wall, use the nylon wall plugs and the self-tapping screws Ø3.9x32mm.

## STEP 2

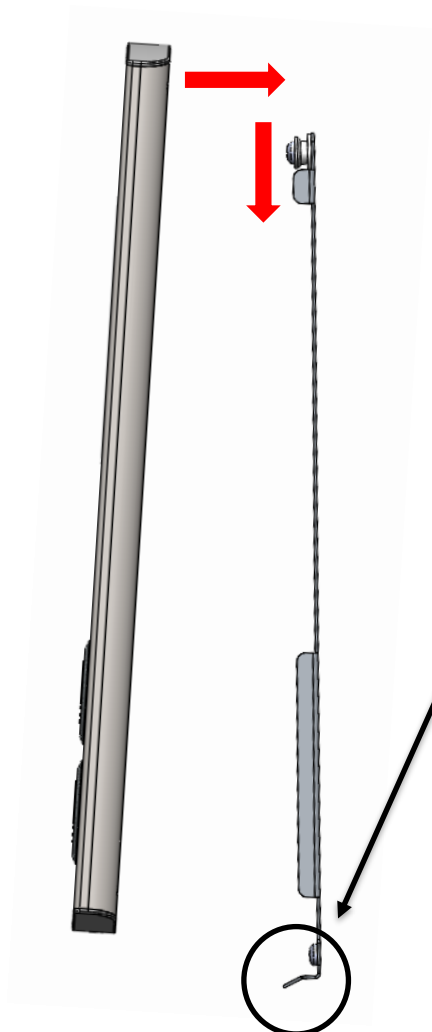


1. Avvicinare la parte frontale [B] al telaio [A], quindi abbassarla così da agganciarla ai due nottolini di fissaggio presenti sul telaio.

**Attenzione:** durante l'operazione tenere la LOP leggermente inclinata per non colpire la linguetta sporgente del telaio.

*1. Bring the front part [B] close to the back plate [A], then lower it to hook it onto the two fixing pins on the back plate.*

**Attention:** during the operation, keep the LOP slightly inclined to not hit the protruding tab of the back plate.

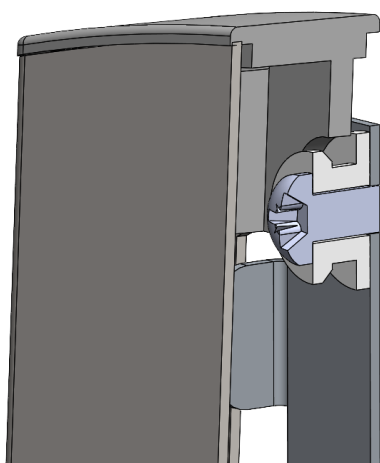

Abbassare  
Lower

## STEP 2




Ruotare  
*Rotate*

2. Attraverso una piccola rotazione accostare la parte inferiore della LOP al telaio.

*2. Rotate the lower part of the LOP slightly to bring it closer to the frame.*

Nottolini di fissaggio  
*Fixing pins*

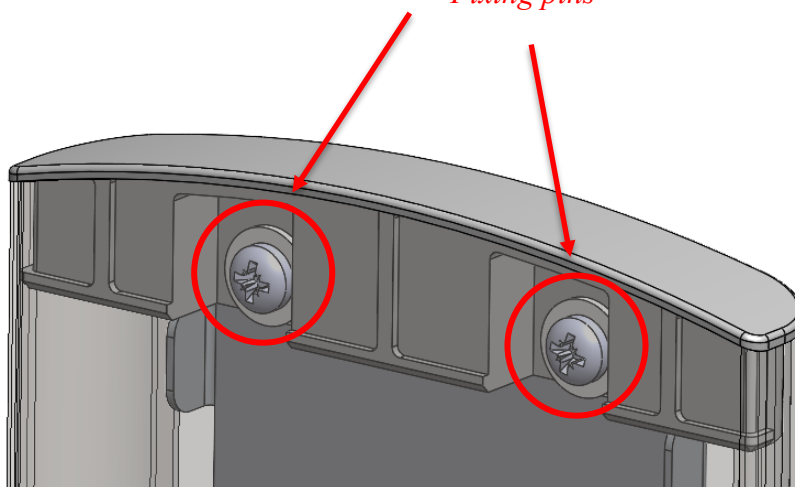


### STEP 3




Una volta che la testata inferiore della LOP è adiacente al telaio, fissare la parte frontale a quest'ultimo avvitando la vite già presente sulla testata inferiore.



*Once the lower head of the LOP is adjacent to the back plate, fix the front part to the back plate by tightening the screw already present on the lower head.*

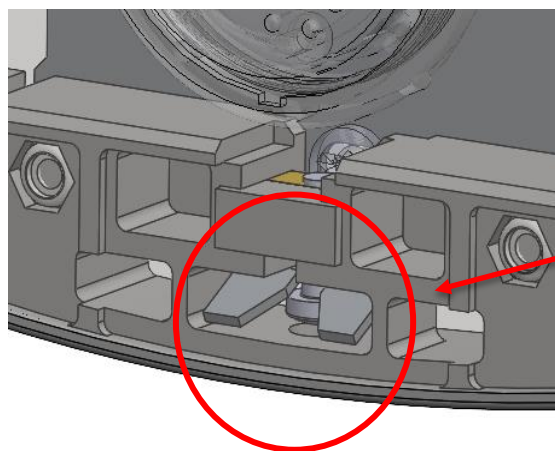

Vite di fissaggio  
*Fixing screw*

Interasse di fissaggio COP standard 201x100  
*Detail for fixing cop standard 201x1000*

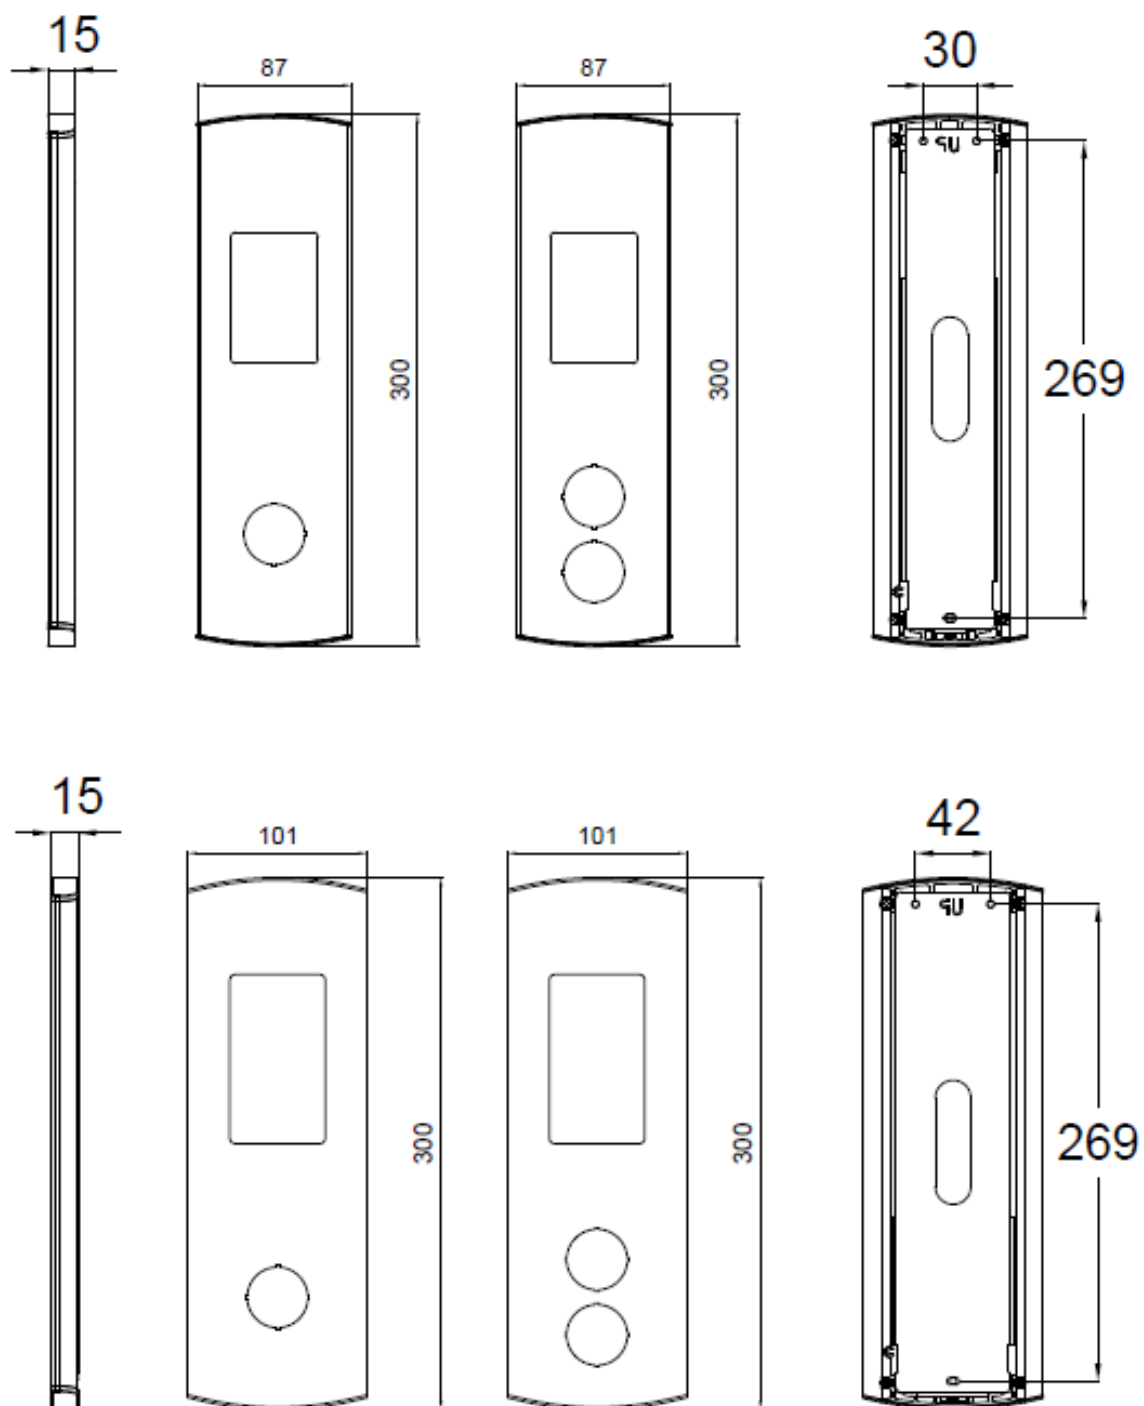

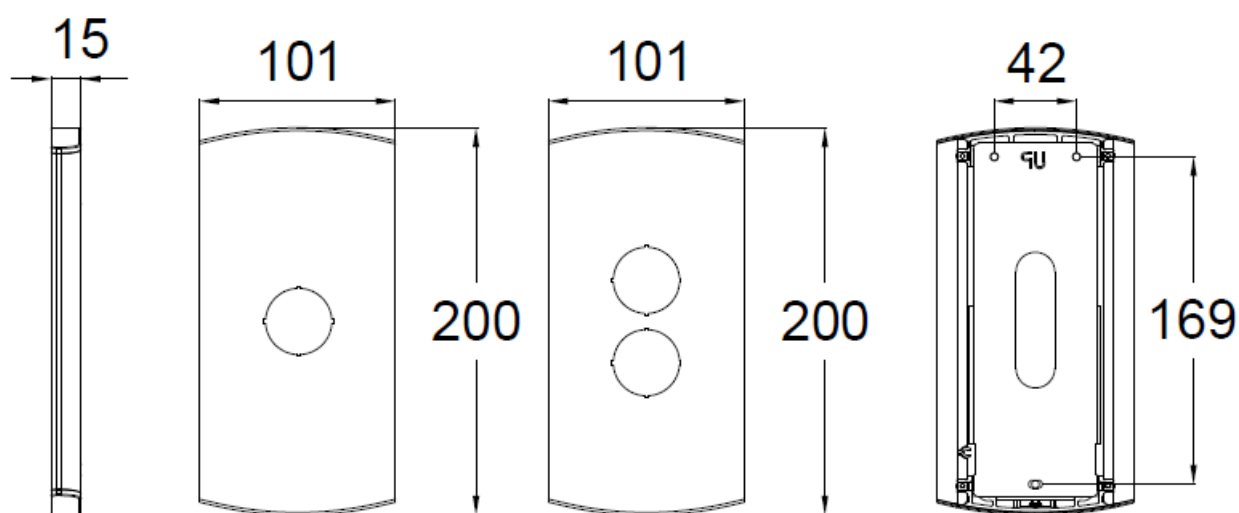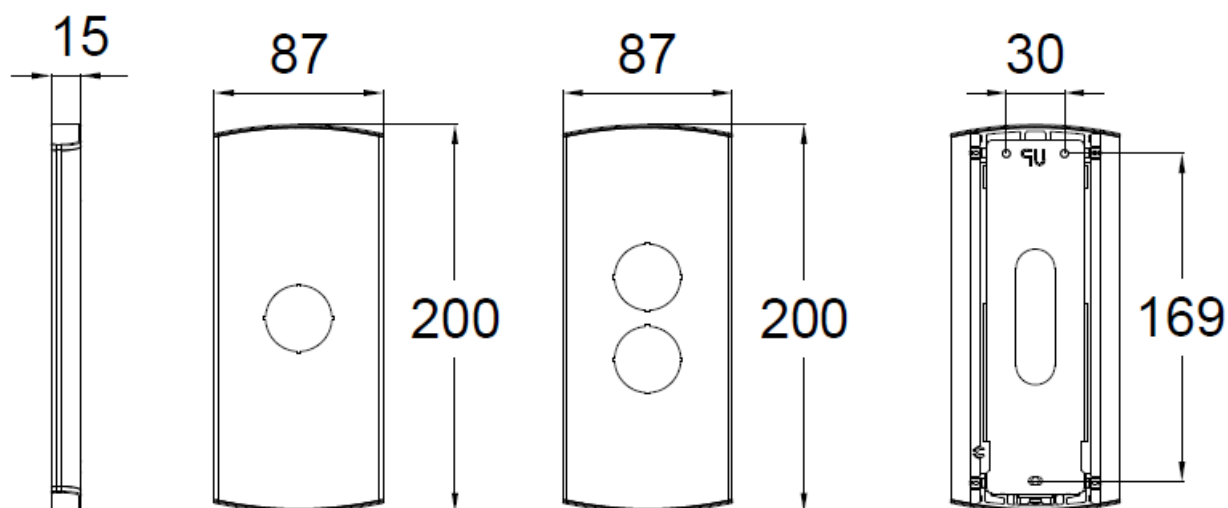

# VEGA®

ITALIAN STYLE FOR LIFTS

*VEGA STYLE LIFT S.r.l., Via Monte Vettore, 12*  
*63845 Ponzano di Fermo (AP) Italy – P.Iva 02018560447*  
**– Tel. +39.0734.631941 Fax +39. 0734.636098 –**