

PCACT




Assembly Instructions
Rev. 01 del 31/03/2015

Package contents:

- Kit vasistas :


A

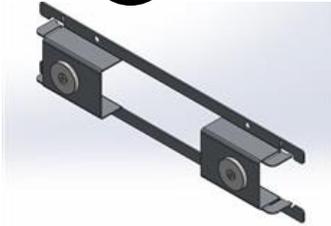

B



C

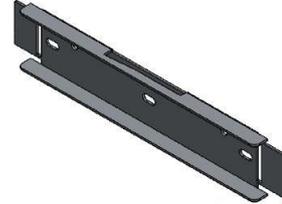

D Self-Tapping Screw \varnothing 3.9 X 13 mm




To be mounted on a
concrete wall

E

PCA CT




STEP 1

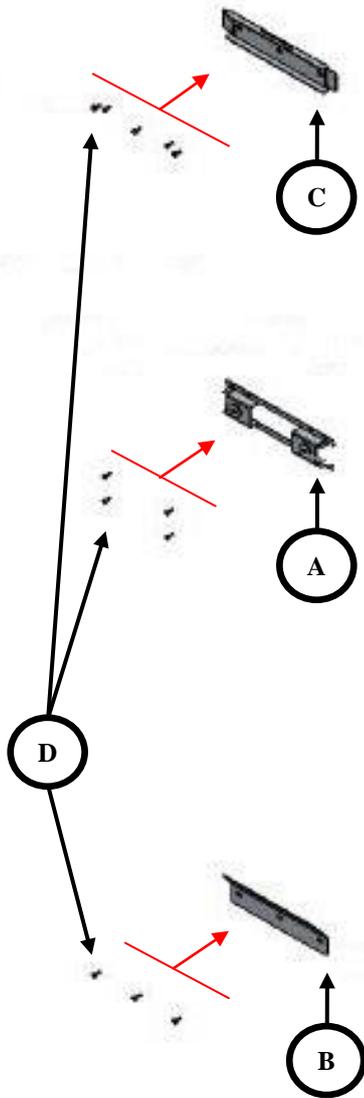

Fix the brackets [B][A][C] to the wall, using the screws [D] as shown in figure.

STEP 2

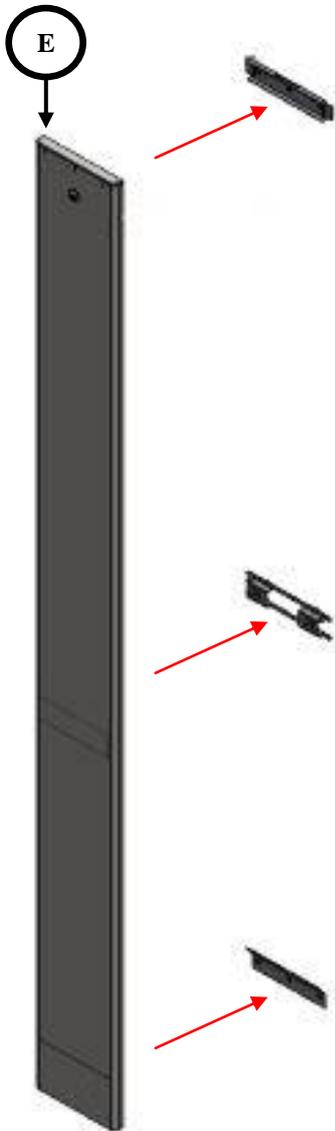

Fix the PACT to the wall with the brackets previously fixed.

STEP 3



-Turn the key for the locking end
of the PCACT:

VEGA[®]

ITALIAN STYLE FOR LIFTS

VEGA STYLE LIFT S.r.l., Via Monte Vettore, 12
63845 Ponzano di Fermo (AP) Italy
– Tel. +39.0734.631941 Fax +39. 0734.636098 –