

VEGA®

ITALIAN STYLE FOR LIFTS

COP COMPACT



Assembly Instructions

Rev.00 - 05/08/2021

Package contents:


[A] Back plate;

[B] Front plate;

[C] Wall fixing screw kit:


- 6x Self-tapping screw $\text{Ø}3.9 \times 16\text{mm}$
- 6x Self-tapping screw $\text{Ø}3.9 \times 32\text{mm}$
- 6x Nylon wall plug $\text{Ø}6 \times 30\text{mm}$

STEP 1

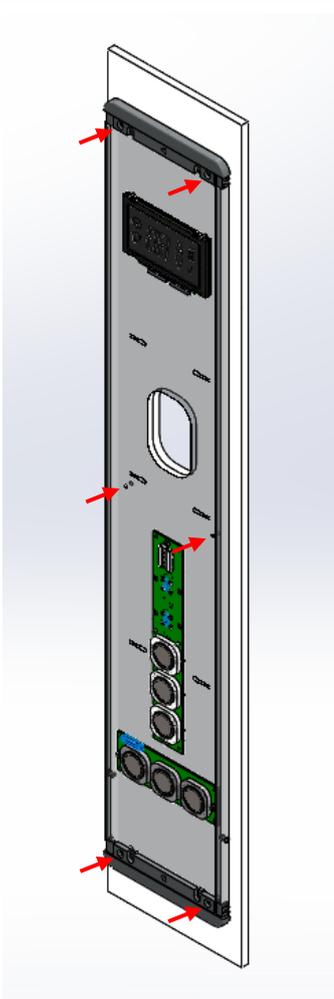


- Place the back plate [A] on the wall;
- Place the two chromed tips on it according to the holes.
- Fix all with the appropriate screws [C] in the six points indicated by the arrows.

STEP 2

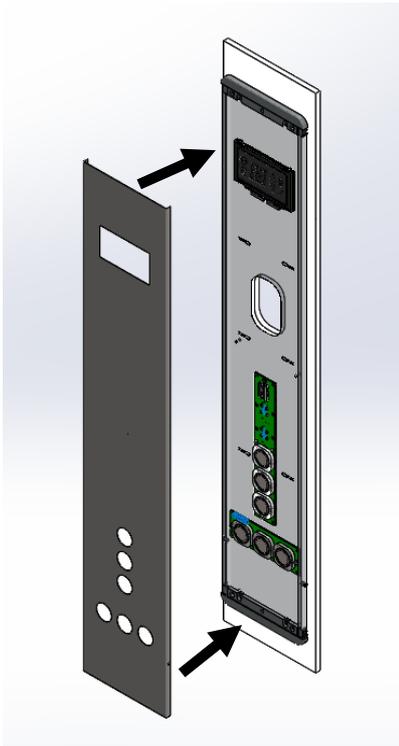

-Fix the front plate [B] to the back plate [A] thanks to the two magnets.

STEP 3

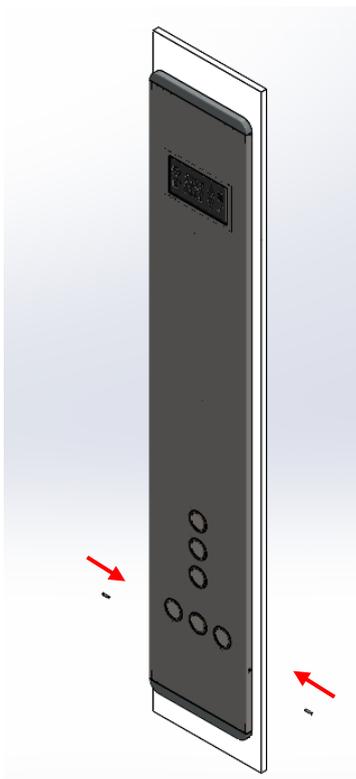

-Screw the two side grub screws to close the COP Compact.
Make sure that grub screws flush with the plate.

VEGA[®]

ITALIAN STYLE FOR LIFTS

VEGA STYLE LIFT S.r.l., Via Monte Vettore, 12
63845 Ponzano di Fermo (AP) Italy – P.Iva 02018560447
– Tel. +39.0734.631941 Fax +39. 0734.636098 –