




VASISTAS COP
with
BOX & KEY

Assembly Instructions
Rev. 01 del 15/12/2014

STEP 1

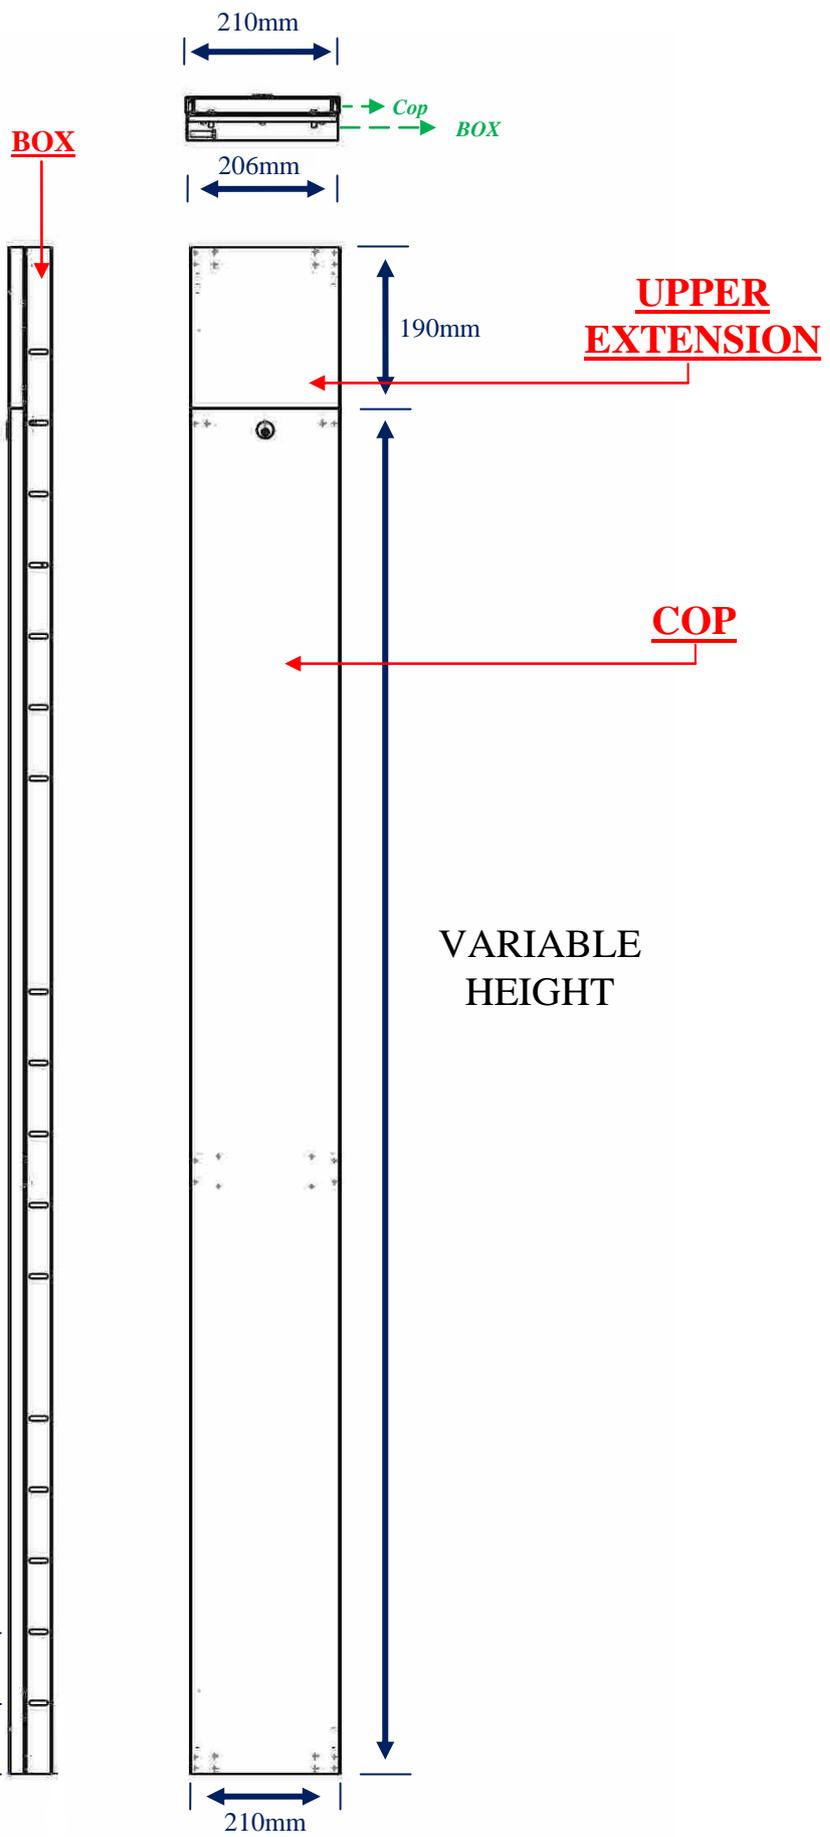


Every buttonhole have a wheelbase of 100mm (or multiples)

STEP 2



- Insert the box inside the compartment.
The compartment is equipped with cage nuts at the buttonholes of the box.


STEP 3

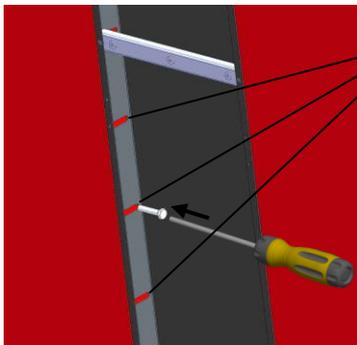

[Bottomholes]


- Tighten the box in the compartment using the screws (M6) as shown.

STEP 4

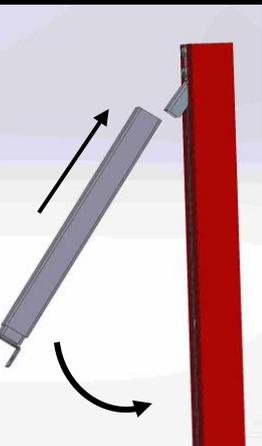


- Insert the upper extension with a roto-translation movement.

STEP 5

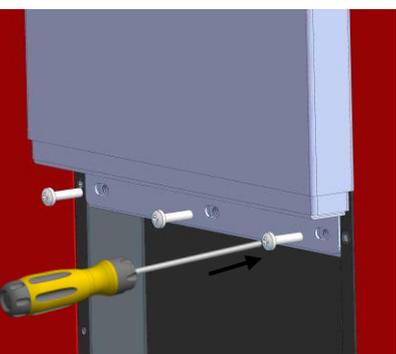


- tighten the three screws for fix the upper extension as shown.

STEP 6

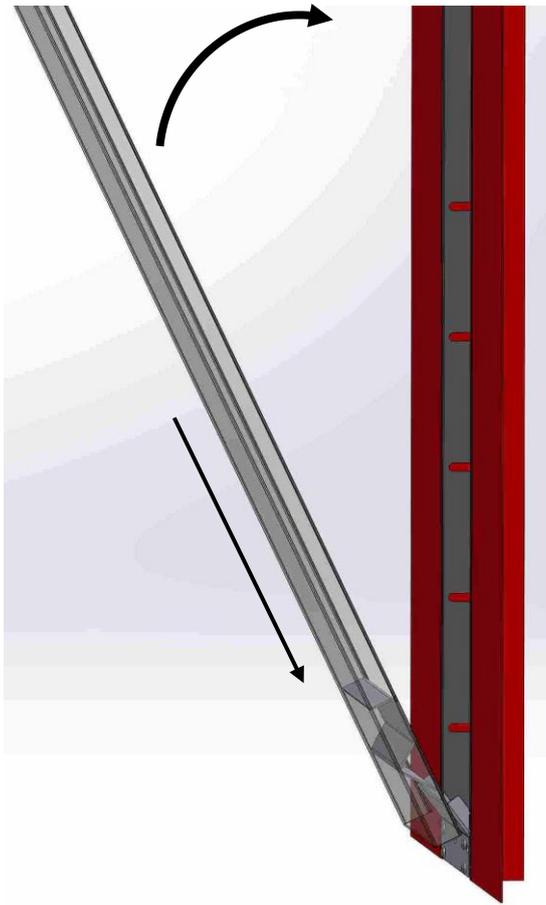

- Insert the VASISTAS COP with a roto-translation movement as shown.

STEP 7

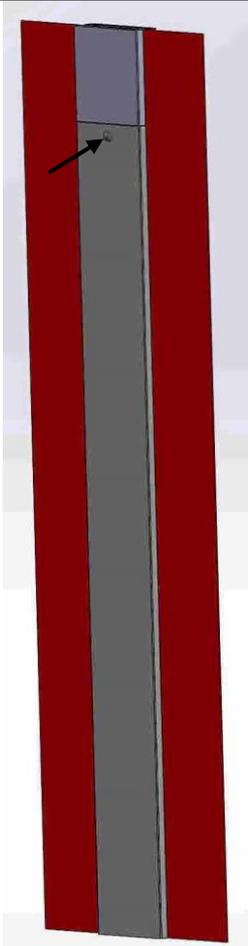

-Turn the key for the locking end of the VASISTAS COP.