


**VASISTAS COP WITH EXTENSION
WITHOUT BOX**




Package contents:

- Kit extension:

A

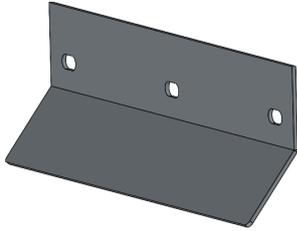

B

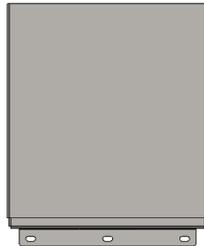


C




Self-Tapping Screws

- Kit vasistas:

D

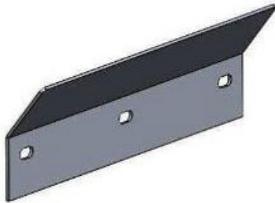

E

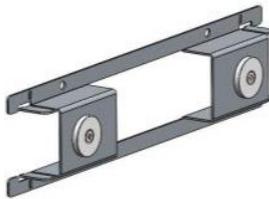

F




Self-Tapping Screws

- Front plate:

G




STEP 1

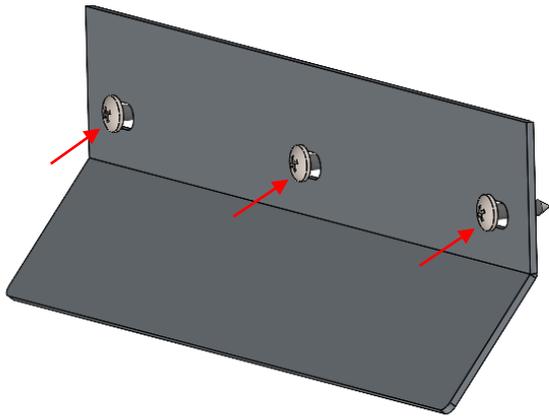


Fix the extension bracket [A] to the wall using the screws provided [C].

STEP 2

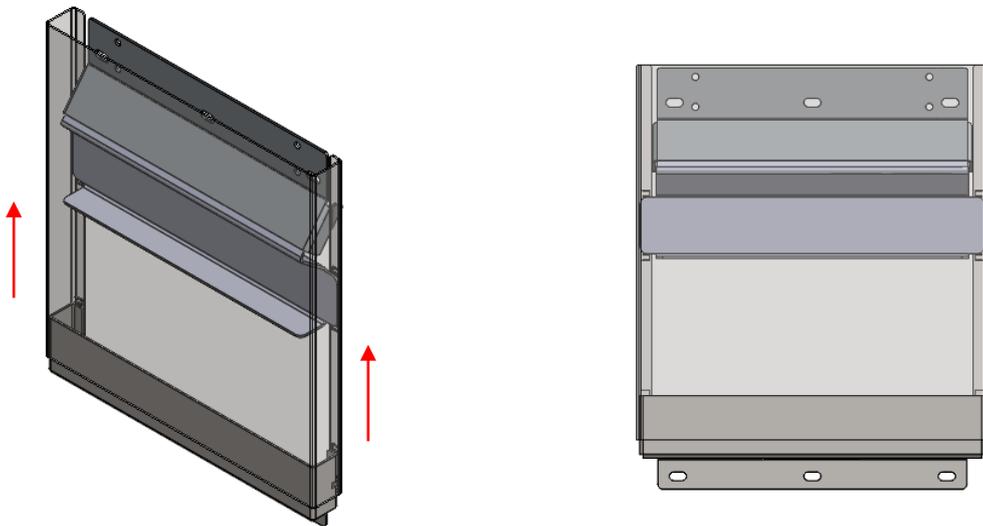


Attach the extension [B] to the bracket fixed to the wall with a movement from bottom to top.

STEP 3

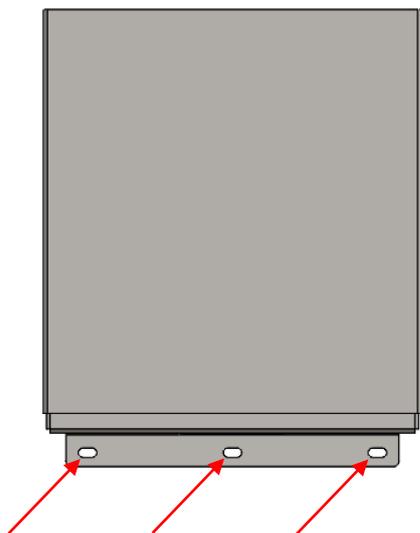


Fix the extension [B] to the wall using the screws provided [C].

STEP 4

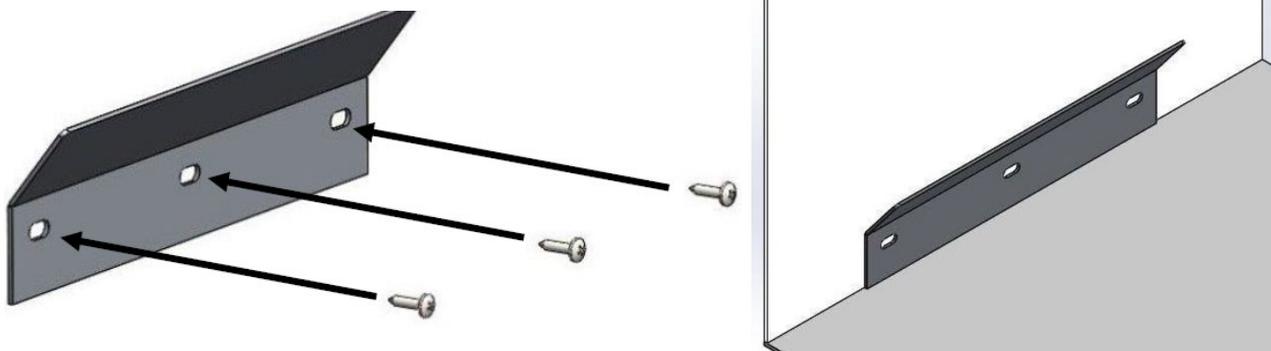


Fix the COP attachment bracket [D] to the wall using the screws provided [F].

STEP 5

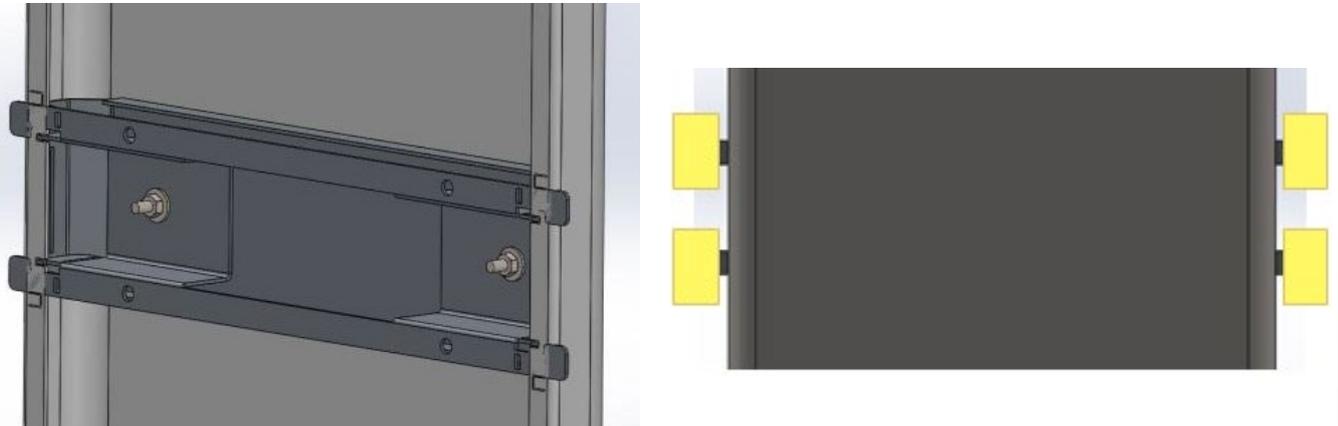

Fix the magnet bracket [E] to the front plate [G] fitting the tabs.
Then fix the tabs to the wall with a tape.

STEP 6

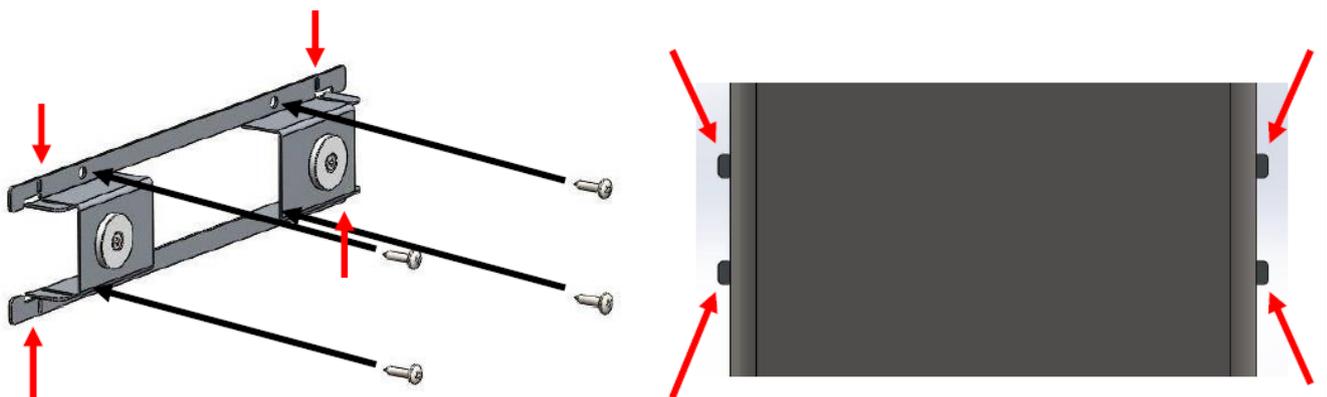

Make the holes on the wall for fixing the self-tapping screws
(4 on top, 4 in the middle).
Remove the breakable tabs (red arrows) breaking them.

STEP 7

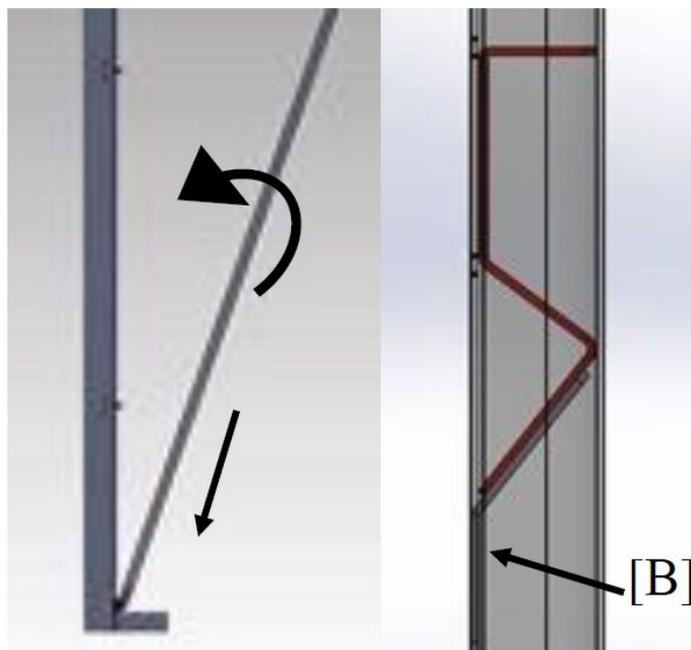


Figura 1

Figura 2

Attach the front plate [G] to the attachment bracket [D] with a movement from the top to the bottom and then with a rotation.

Once the front plate [G] is completely fixed to the wall through the magnet bracket [E], turn the key on the top to set the COP.

VEGA®

ITALIAN STYLE FOR LIFTS

*VEGA STYLE LIFT S.r.l., Via Monte Vettore, 12
63845 Ponzano di Fermo (AP) Italy*

– Tel. +39.0734.631941 Fax +39. 0734.636098 –