

FLORENCE

S
e
r
i
e

2
0
0



Assembly instruction

Rev.02 del 28/01/2015

Package Contents:

[A] Upper support

[B] Lower support


[C] Upper end piece

[D] Plate


[E] Lower end piece



[A]

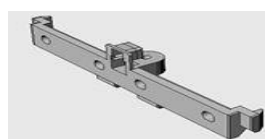

[B]

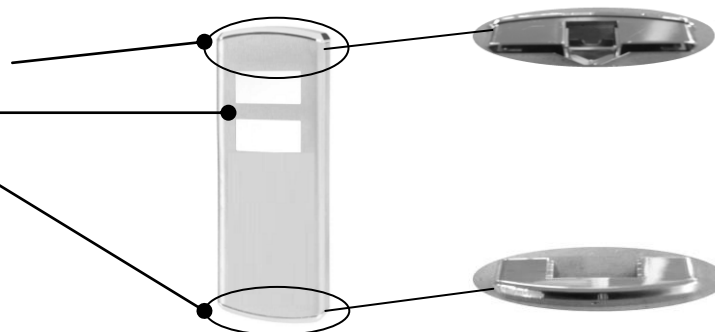


[F] Self-tapping screw $\varnothing 3.9 \times 16$ mm



To be mounted on a concrete metal wall

STEP 1

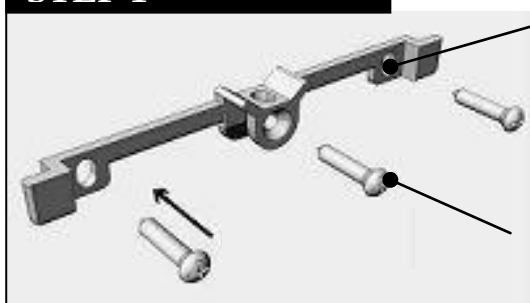


[A]

- Position upper support[A] on wall;
- Fix it with appropriate screw.

[F]

Note 1: The distance between the upper head [C] and the upper support hole is 31 mm.

STEP 2

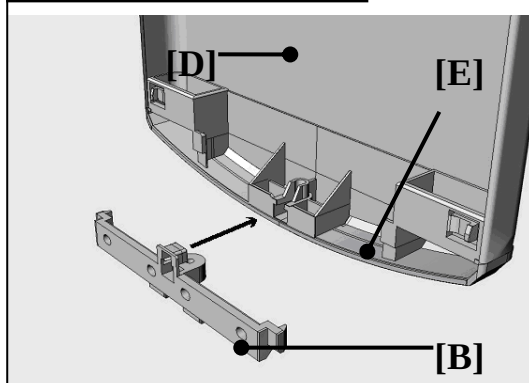


[D]

[E]

[B]

- Insert the lower support [B] in the lower end piece [E] as shown, to position the supports [A] and [B] at the right distance between them

STEP 3

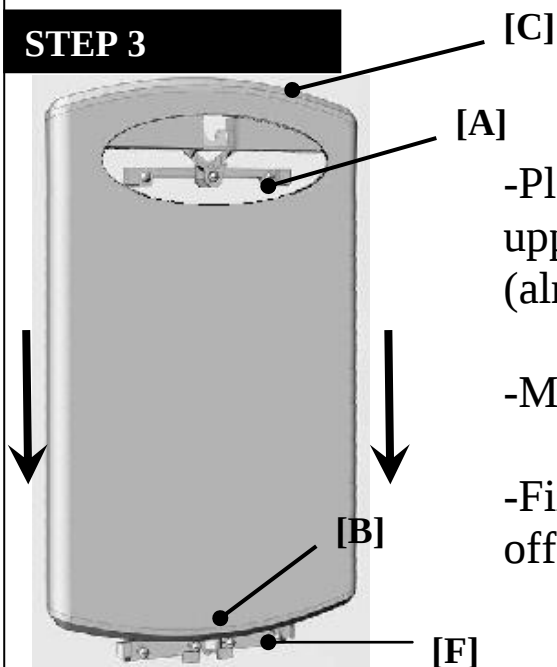


-Place the plate [D] (by up/down) on the upper support [A] proper accommodation (already fixed in the STEP 1);

-Make a little down pressure;


-Fix lower support [B] as shown and take off the plate.

STEP 4

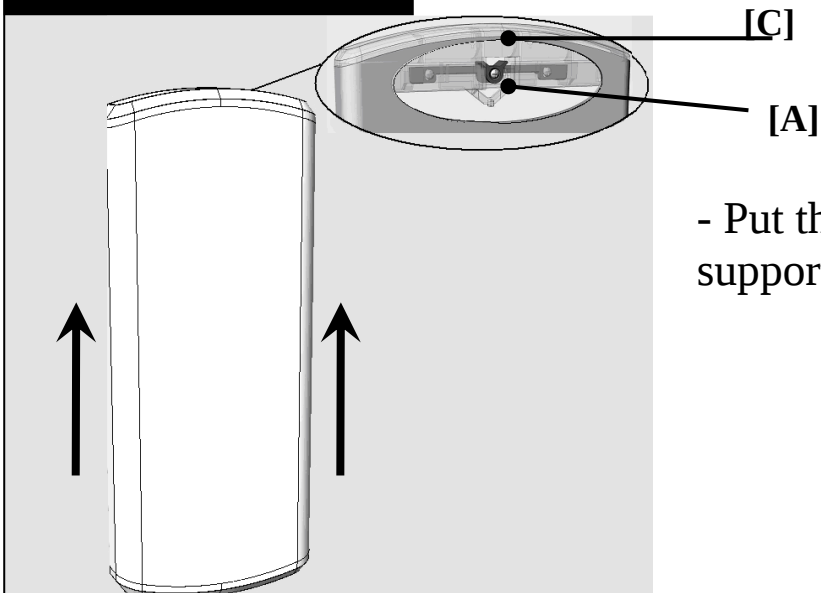

- Put the plate in the appropriate support-(by down-up)

STEP 5

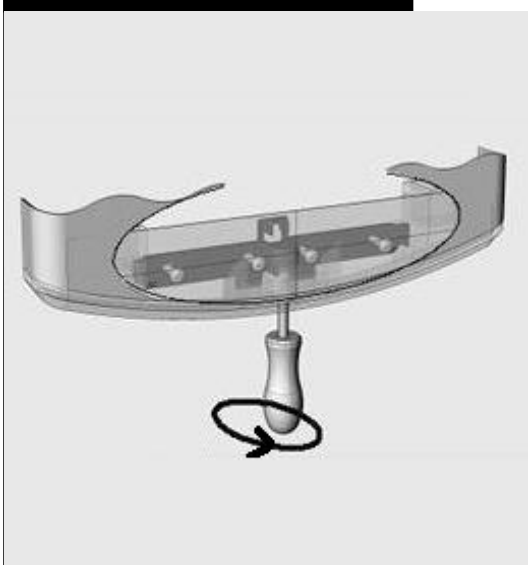

-Tighten the screw of fixing of the plate in lower support [B].



ITALIAN STYLE FOR LIFTS

VEGA STYLE LIFT S.r.l., Via Monte Vettore, 12
63845 Ponzano di Fermo (AP) Italy – P.Iva 02018560447
– Tel. +39.0734.631941 Fax +39. 0734.636098 –