


LOP COMPACT

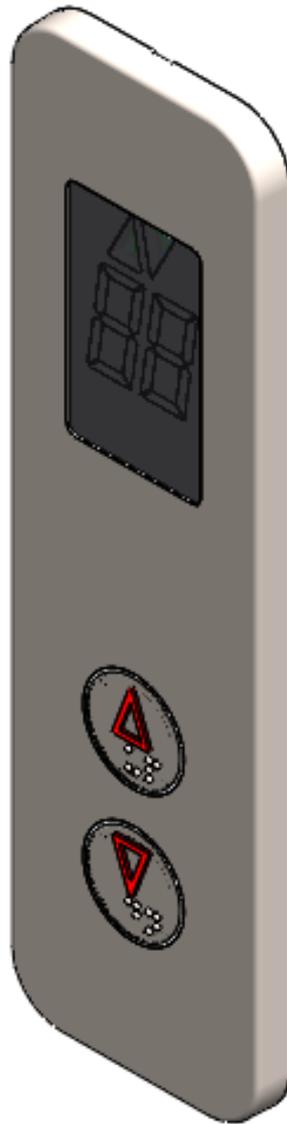

Assembly Instructions

Rev.00 - 05/08/2021

Package contents:

[A] Back plate;

[B] Front plate;

[C] Wall fixing screw kit:


- 4x Self-tapping screw $\text{Ø}3.9 \times 16\text{mm}$
- 4x Self-tapping screw $\text{Ø}3.9 \times 32\text{mm}$
- 4x Nylon wall plug $\text{Ø}6 \times 30\text{mm}$

STEP 1



- Place the back plate [A] on the wall;
- Fix it with the appropriate screws [C] in the four points indicated by the arrows.

STEP 2

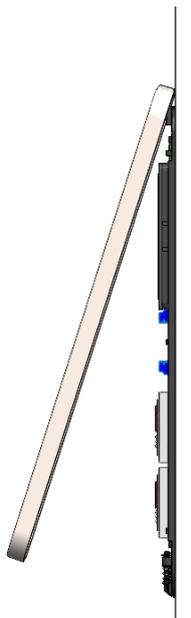


-Fix the front plate [B] to the back plate [A] with a movement from top to bottom.

STEP 3



-Push the front plate [B] on the back plate [A] to close the LOP Compact while the lever in the lower part of the wall plate is pressed with a screwdriver. Then, pushing the plate to the wall, remove the screwdriver.



VEGA[®]

ITALIAN STYLE FOR LIFTS

VEGA STYLE LIFT S.r.l., Via Monte Vettore, 12
63845 Ponzano di Fermo (AP) Italy – P.Iva 02018560447
– Tel. +39.0734.631941 Fax +39. 0734.636098 –