


COP VISION DMX

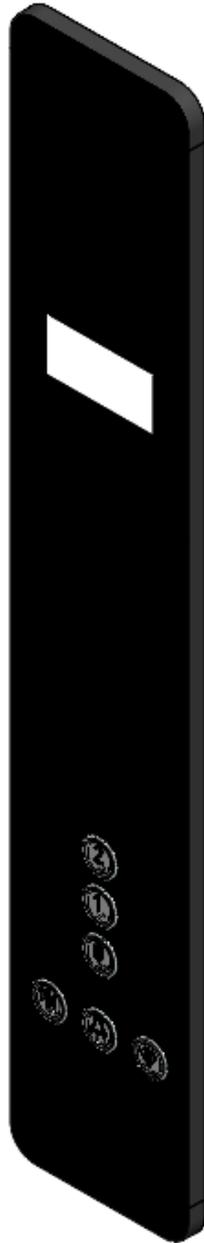

Assembly Instructions

Rev.00 - 18/11/2022

Package contents:


[A] Back plate;

[B] Front plate;

[C] Wall fixing screw kit:

- 6x Self-tapping screw $\text{Ø}3.9 \times 16\text{mm}$
- 6x Self-tapping screw $\text{Ø}3.9 \times 32\text{mm}$
- 6x Nylon wall plug $\text{Ø}6 \times 30\text{mm}$

STEP 1

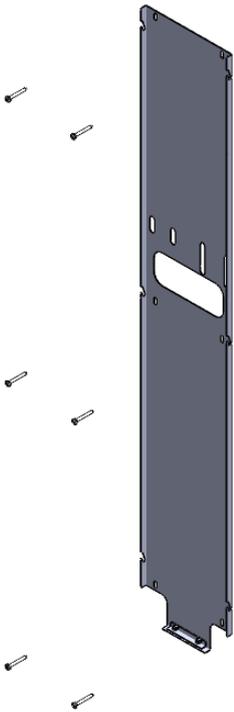


- Place the back plate [A] on the wall;
- Fix it with the appropriate screws [C].

STEP 2



-Fix the front plate [B] to the back plate [A], with a movement from top to bottom, by hooking the 6 pins on the front plate with the respective 6 slots on the back plate.

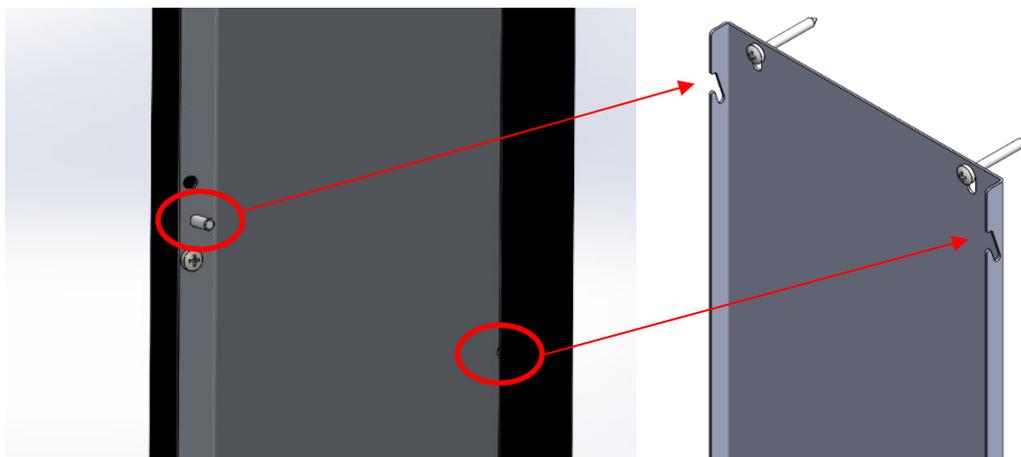

STEP 3



-Screw the bottom screw to close the COP.

VEGA[®]

ITALIAN STYLE FOR LIFTS

VEGA STYLE LIFT S.r.l., Via Monte Vettore, 12
63845 Ponzano di Fermo (AP) Italy – P.Iva 02018560447
– Tel. +39.0734.631941 Fax +39. 0734.636098 –