


# VEGA®

ITALIAN STYLE FOR LIFTS

## COP SURFACE

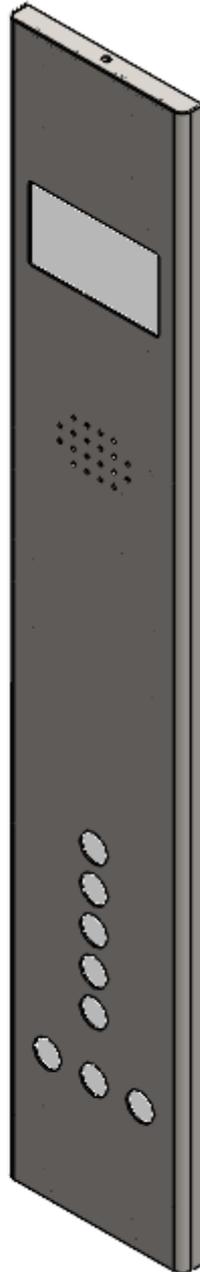

### **Assembly Instructions**

Rev.00 - 26/05/2023

## Package contents:

[A] Back plate;

[B] Front plate;


[C] Wall fixing screw kit:

- 8x Self-tapping screw  $\text{Ø}3.9 \times 32\text{mm}$ ;
- 8x Self-tapping screw  $\text{Ø}3.9 \times 16\text{mm}$ ;
- 8x Nylon wall plug  $\text{Ø}6 \times 30\text{mm}$ .

[D] COP fixing screw kit:

- 2x Hexagon socket head screw  $\text{Ø}4 \times 12\text{mm}$ .


### STEP 1

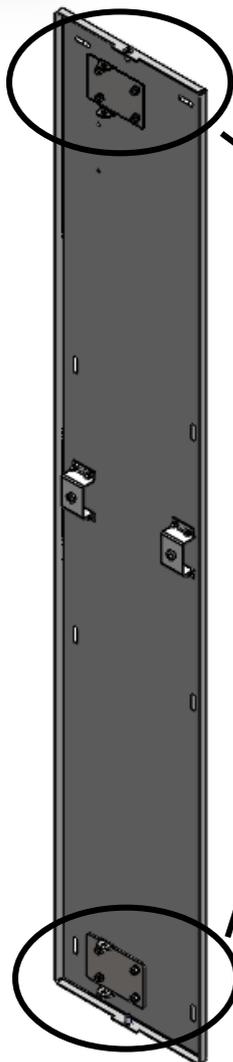

Place the back plate [A] on the wall making sure that the slots are positioned as shown in the figure.  
The horizontal slots identify the top of the back plate.



Mark the holes on the slots and drill.

## STEP 2

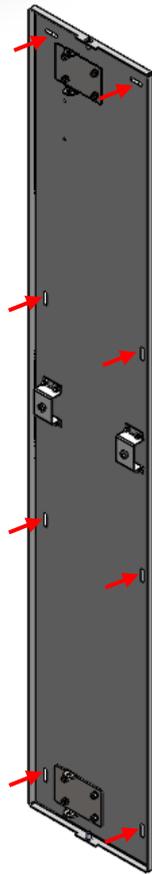

After drilling, fix the back plate to the wall, as shown in the figure, using the wall fixing screw kit [C].

## STEP 3

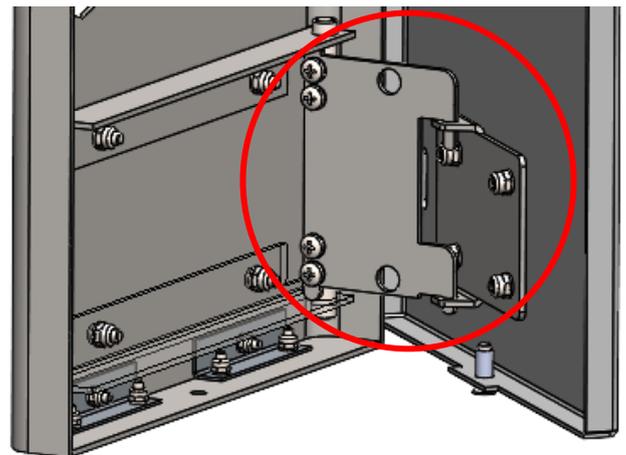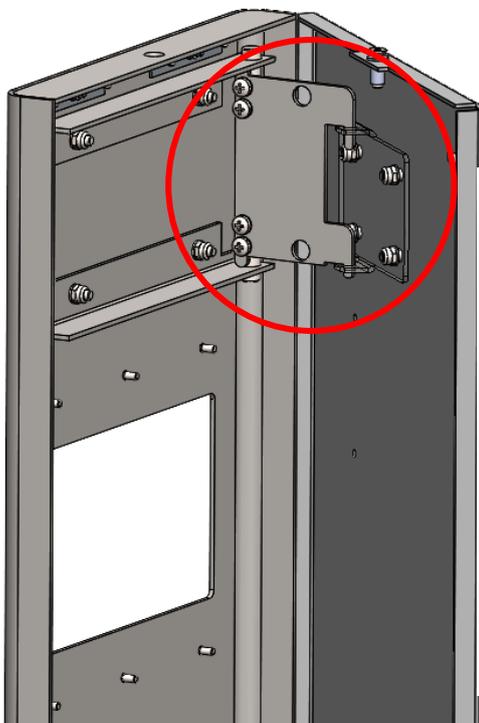

Fix the front plate [B] to the back plate by hooking the two hinge grip brackets to the respective fastening brackets placed on the back plate.

## STEP 4



After hooking the front part to the back plate, fix the COP with the supplied fixing kit [D], using an Allen key.

# VEGA<sup>®</sup>

ITALIAN STYLE FOR LIFTS

*VEGA STYLE LIFT S.r.l., Via Monte Vettore, 12*  
*63845 Ponzano di Fermo (AP) Italy – P.Iva 02018560447*  
– Tel. +39.0734.631941 Fax +39. 0734.636098 –